



 
41061



1



2

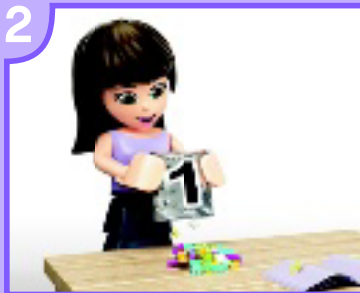


3



 4



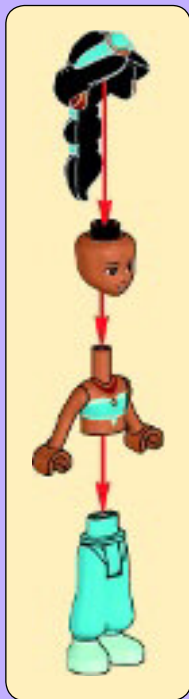



1x

1



4



1x

1x

2



 


1x



1x

3

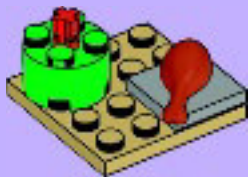

1x

4



5



2x

5



6



 
1x

6





7

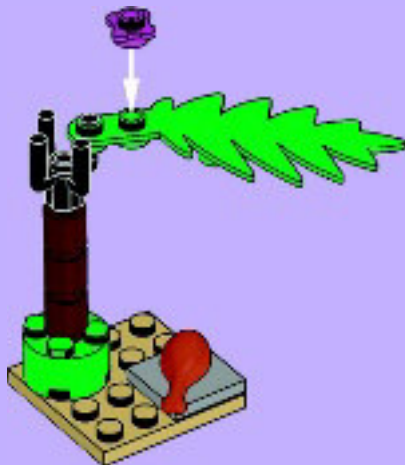

8





1x

1



8



1x



1x

2





 
 
2x

3



2x


4

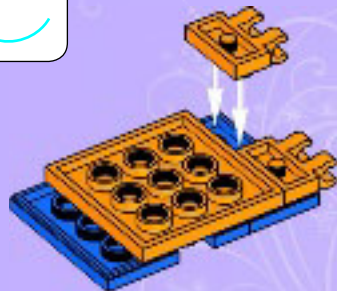



2x

 5

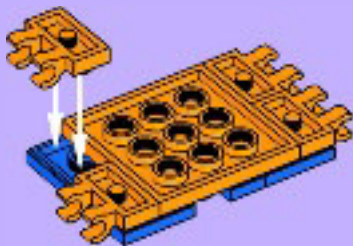

10



2x

 
 
 
6





1x


7

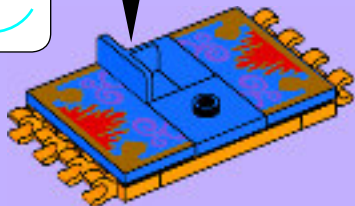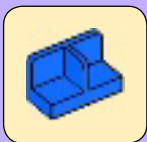



1x

 1



2x

2





2x

3



1x



1x

4





1x

1



14



1x

2





2x



1x

3



 
1x

4

1



2

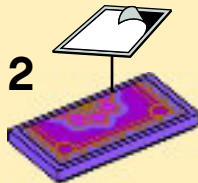



1x

5



16



1x



1x



1x



1x



1x

6





1x

7



4x

8



2x





2x



2x

9



18



1x

10





2x



2x

11



1x



1x



1x

12





41061





1



2





2x

3



2x

4





5

 


4




6



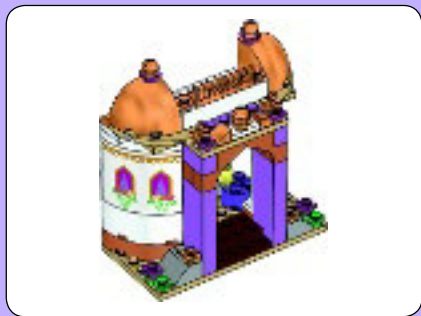

1x

 1

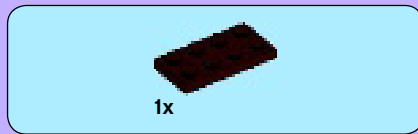


1x

2







 
3

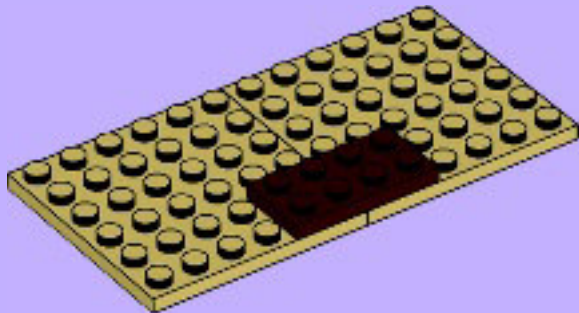


6

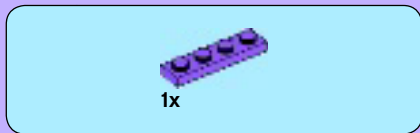 


4

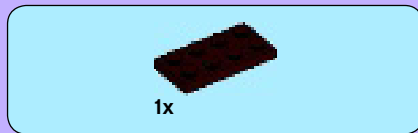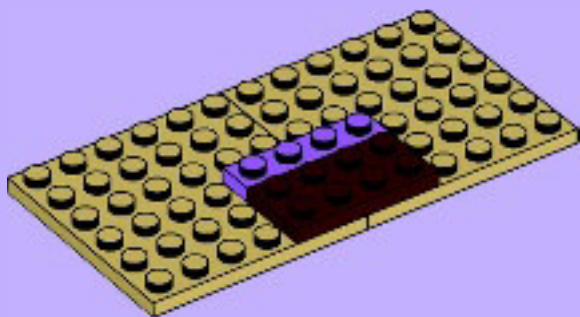  

5

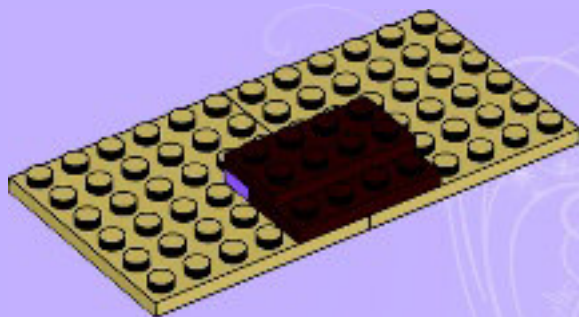 

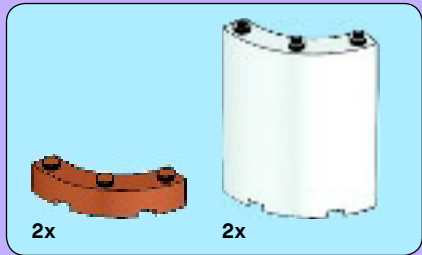 

6

1

 


2



3



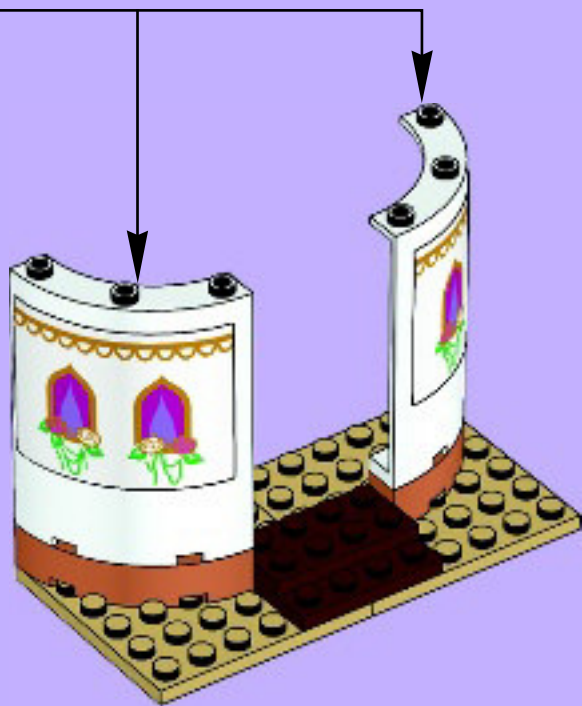

7





2x

 
8





2x

9

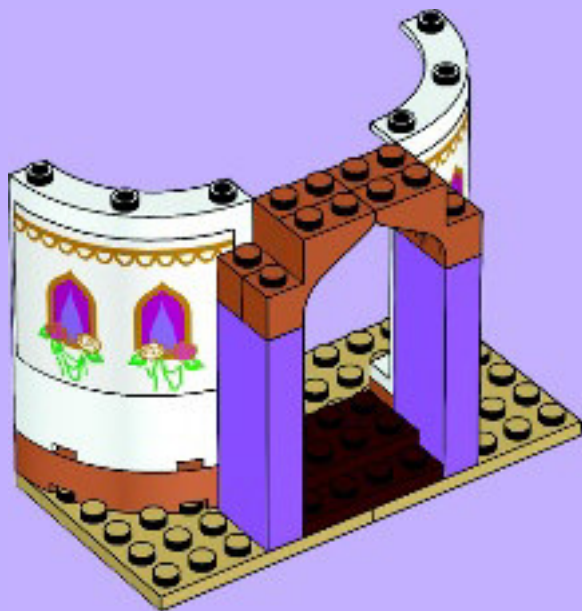

2x

10



 


1x


11




12

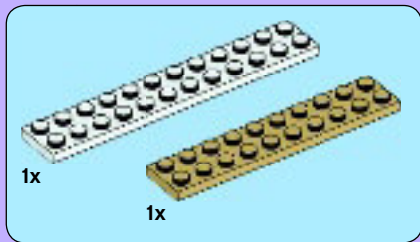

12

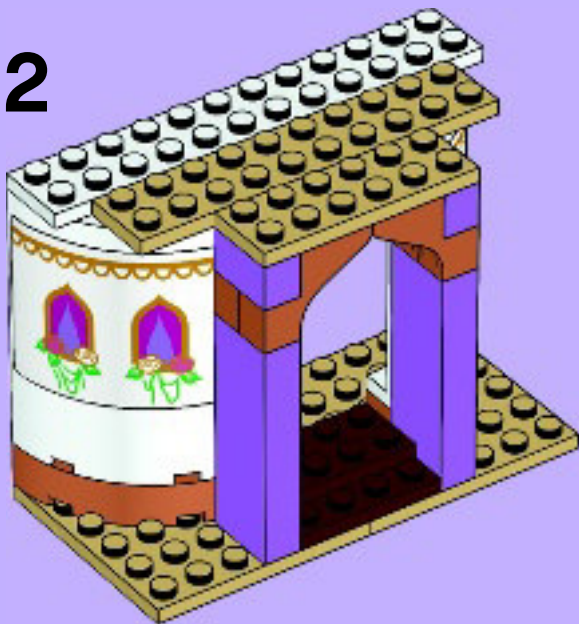 

13

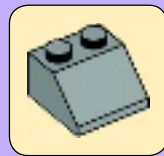 




2x




2x

 14

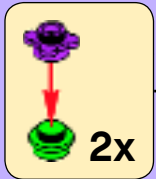

2x

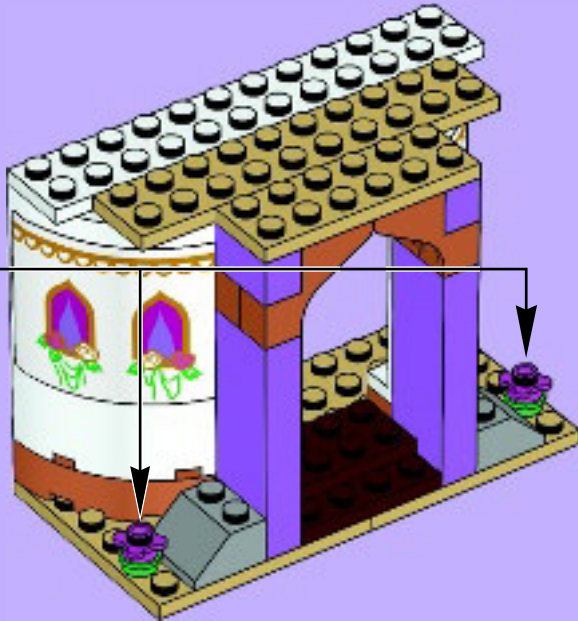 



2x



2x

15





2x

16





2x



2x

17



 


2x



1x



18

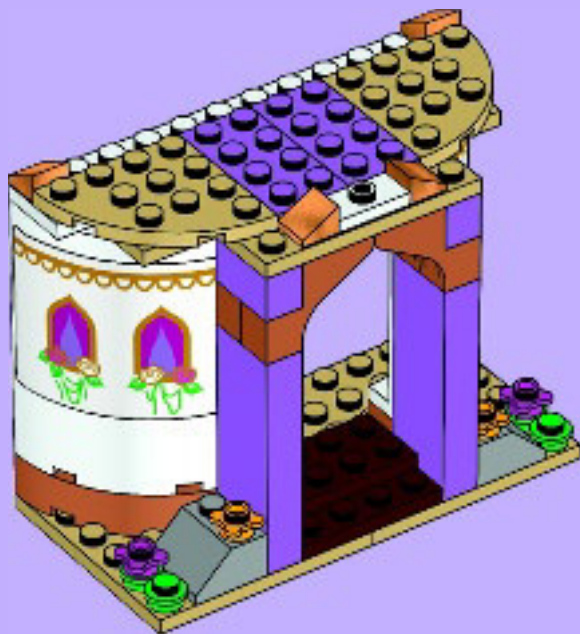




2x

   
19

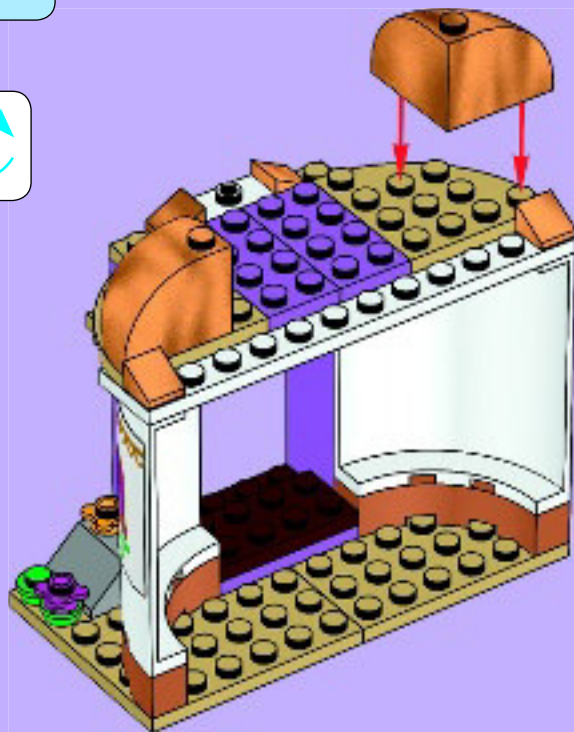

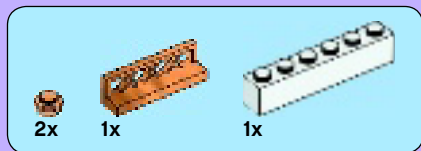


20

 
1

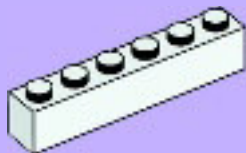


2

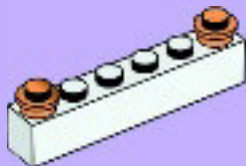 

3

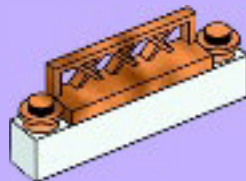 

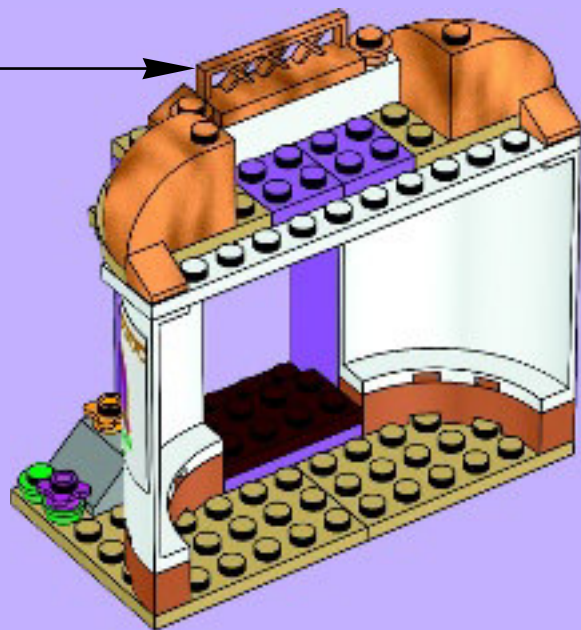 




1x



1x



 
21

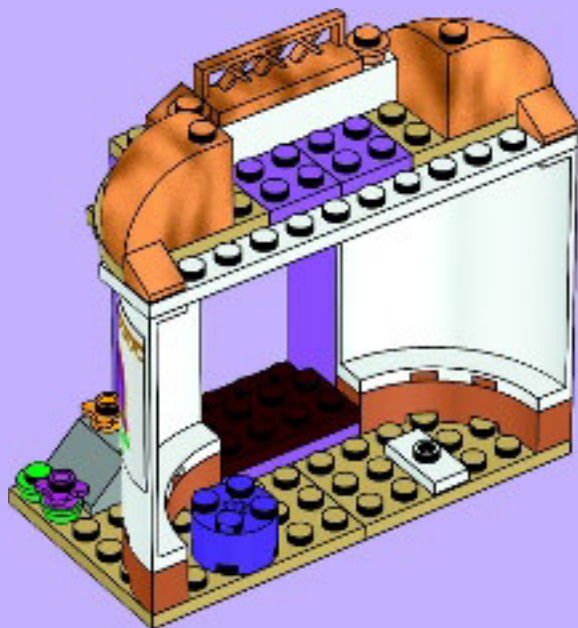

22



   22

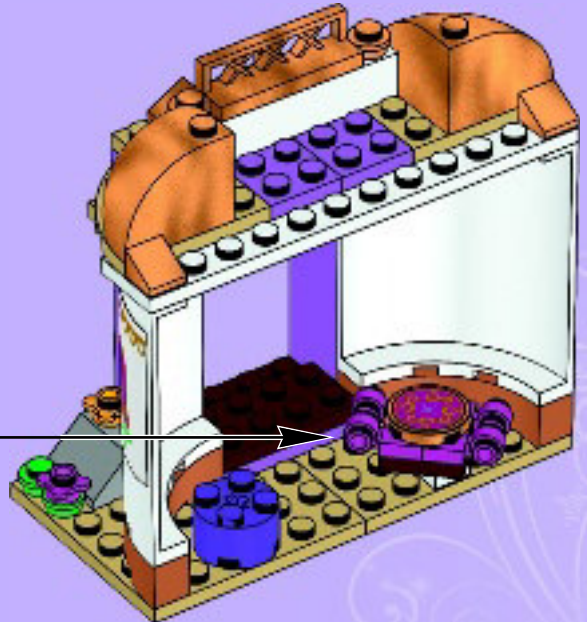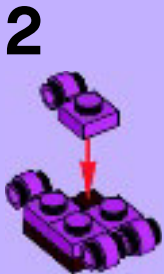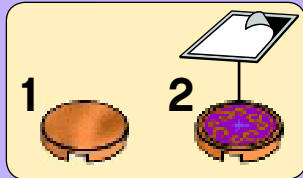




1x



1x

 23

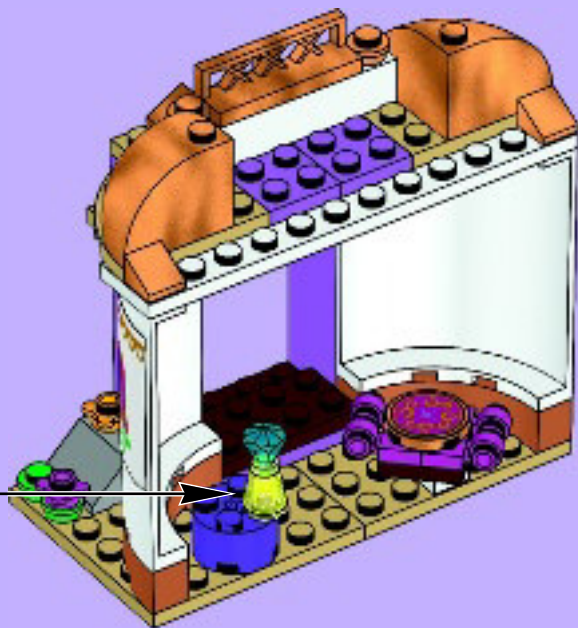

24

 


1x



2x

24





1x



2x

25



26

 


2x

 


2x

26

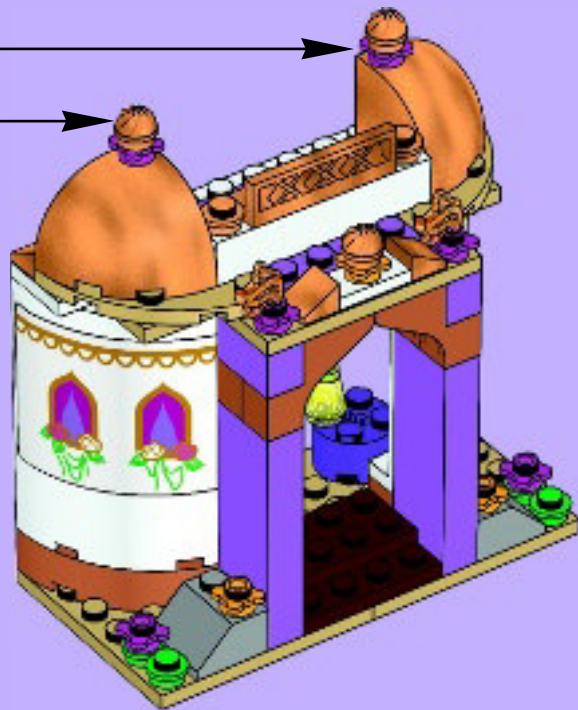



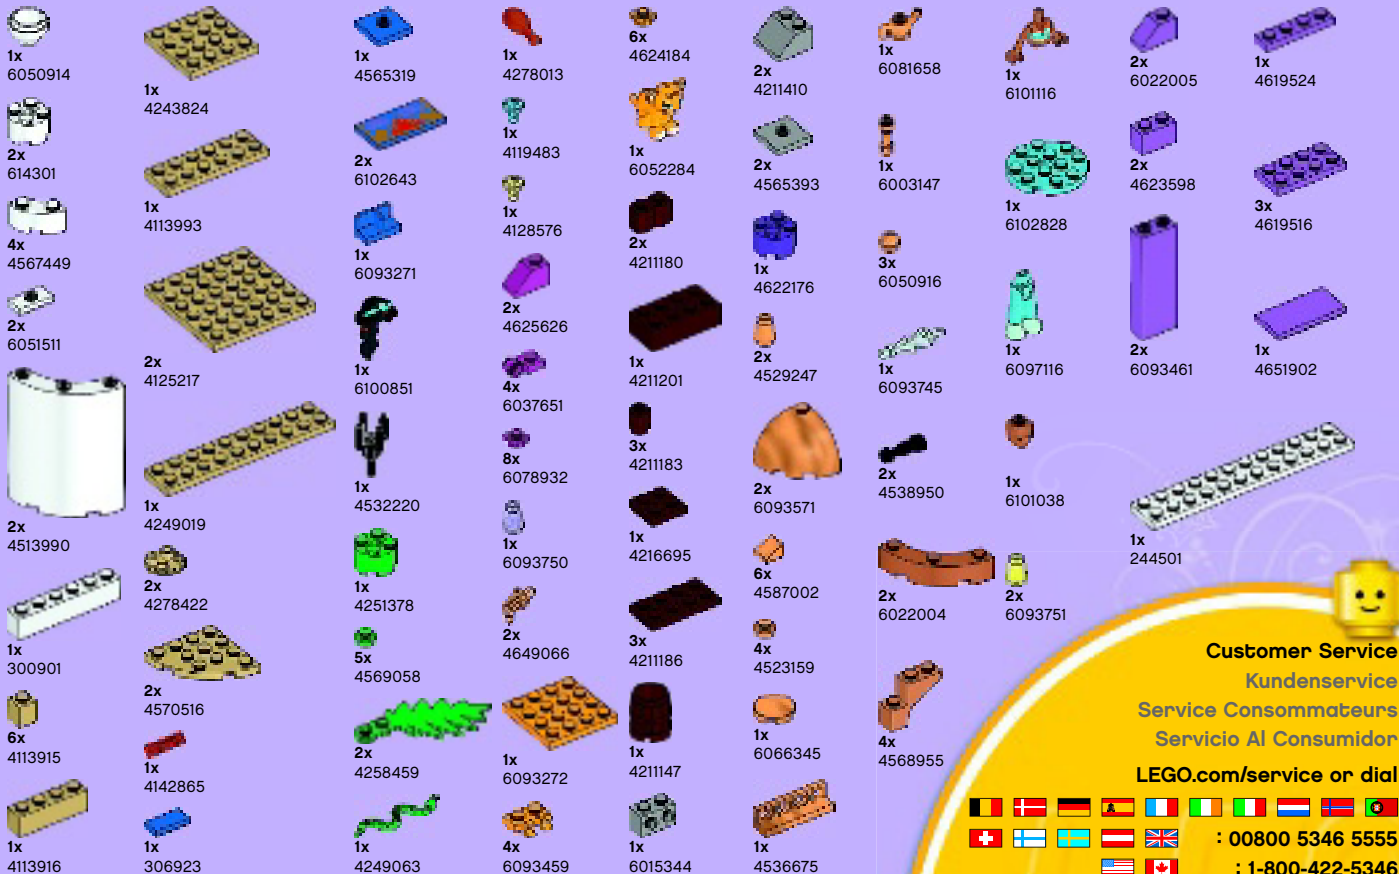

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346

41062



Disney
FROZEN

41055



41054





41060

41061

41063

LEGO.com/disneyprincess



Disney
FROZEN

