

Speed_manual size: 305*170

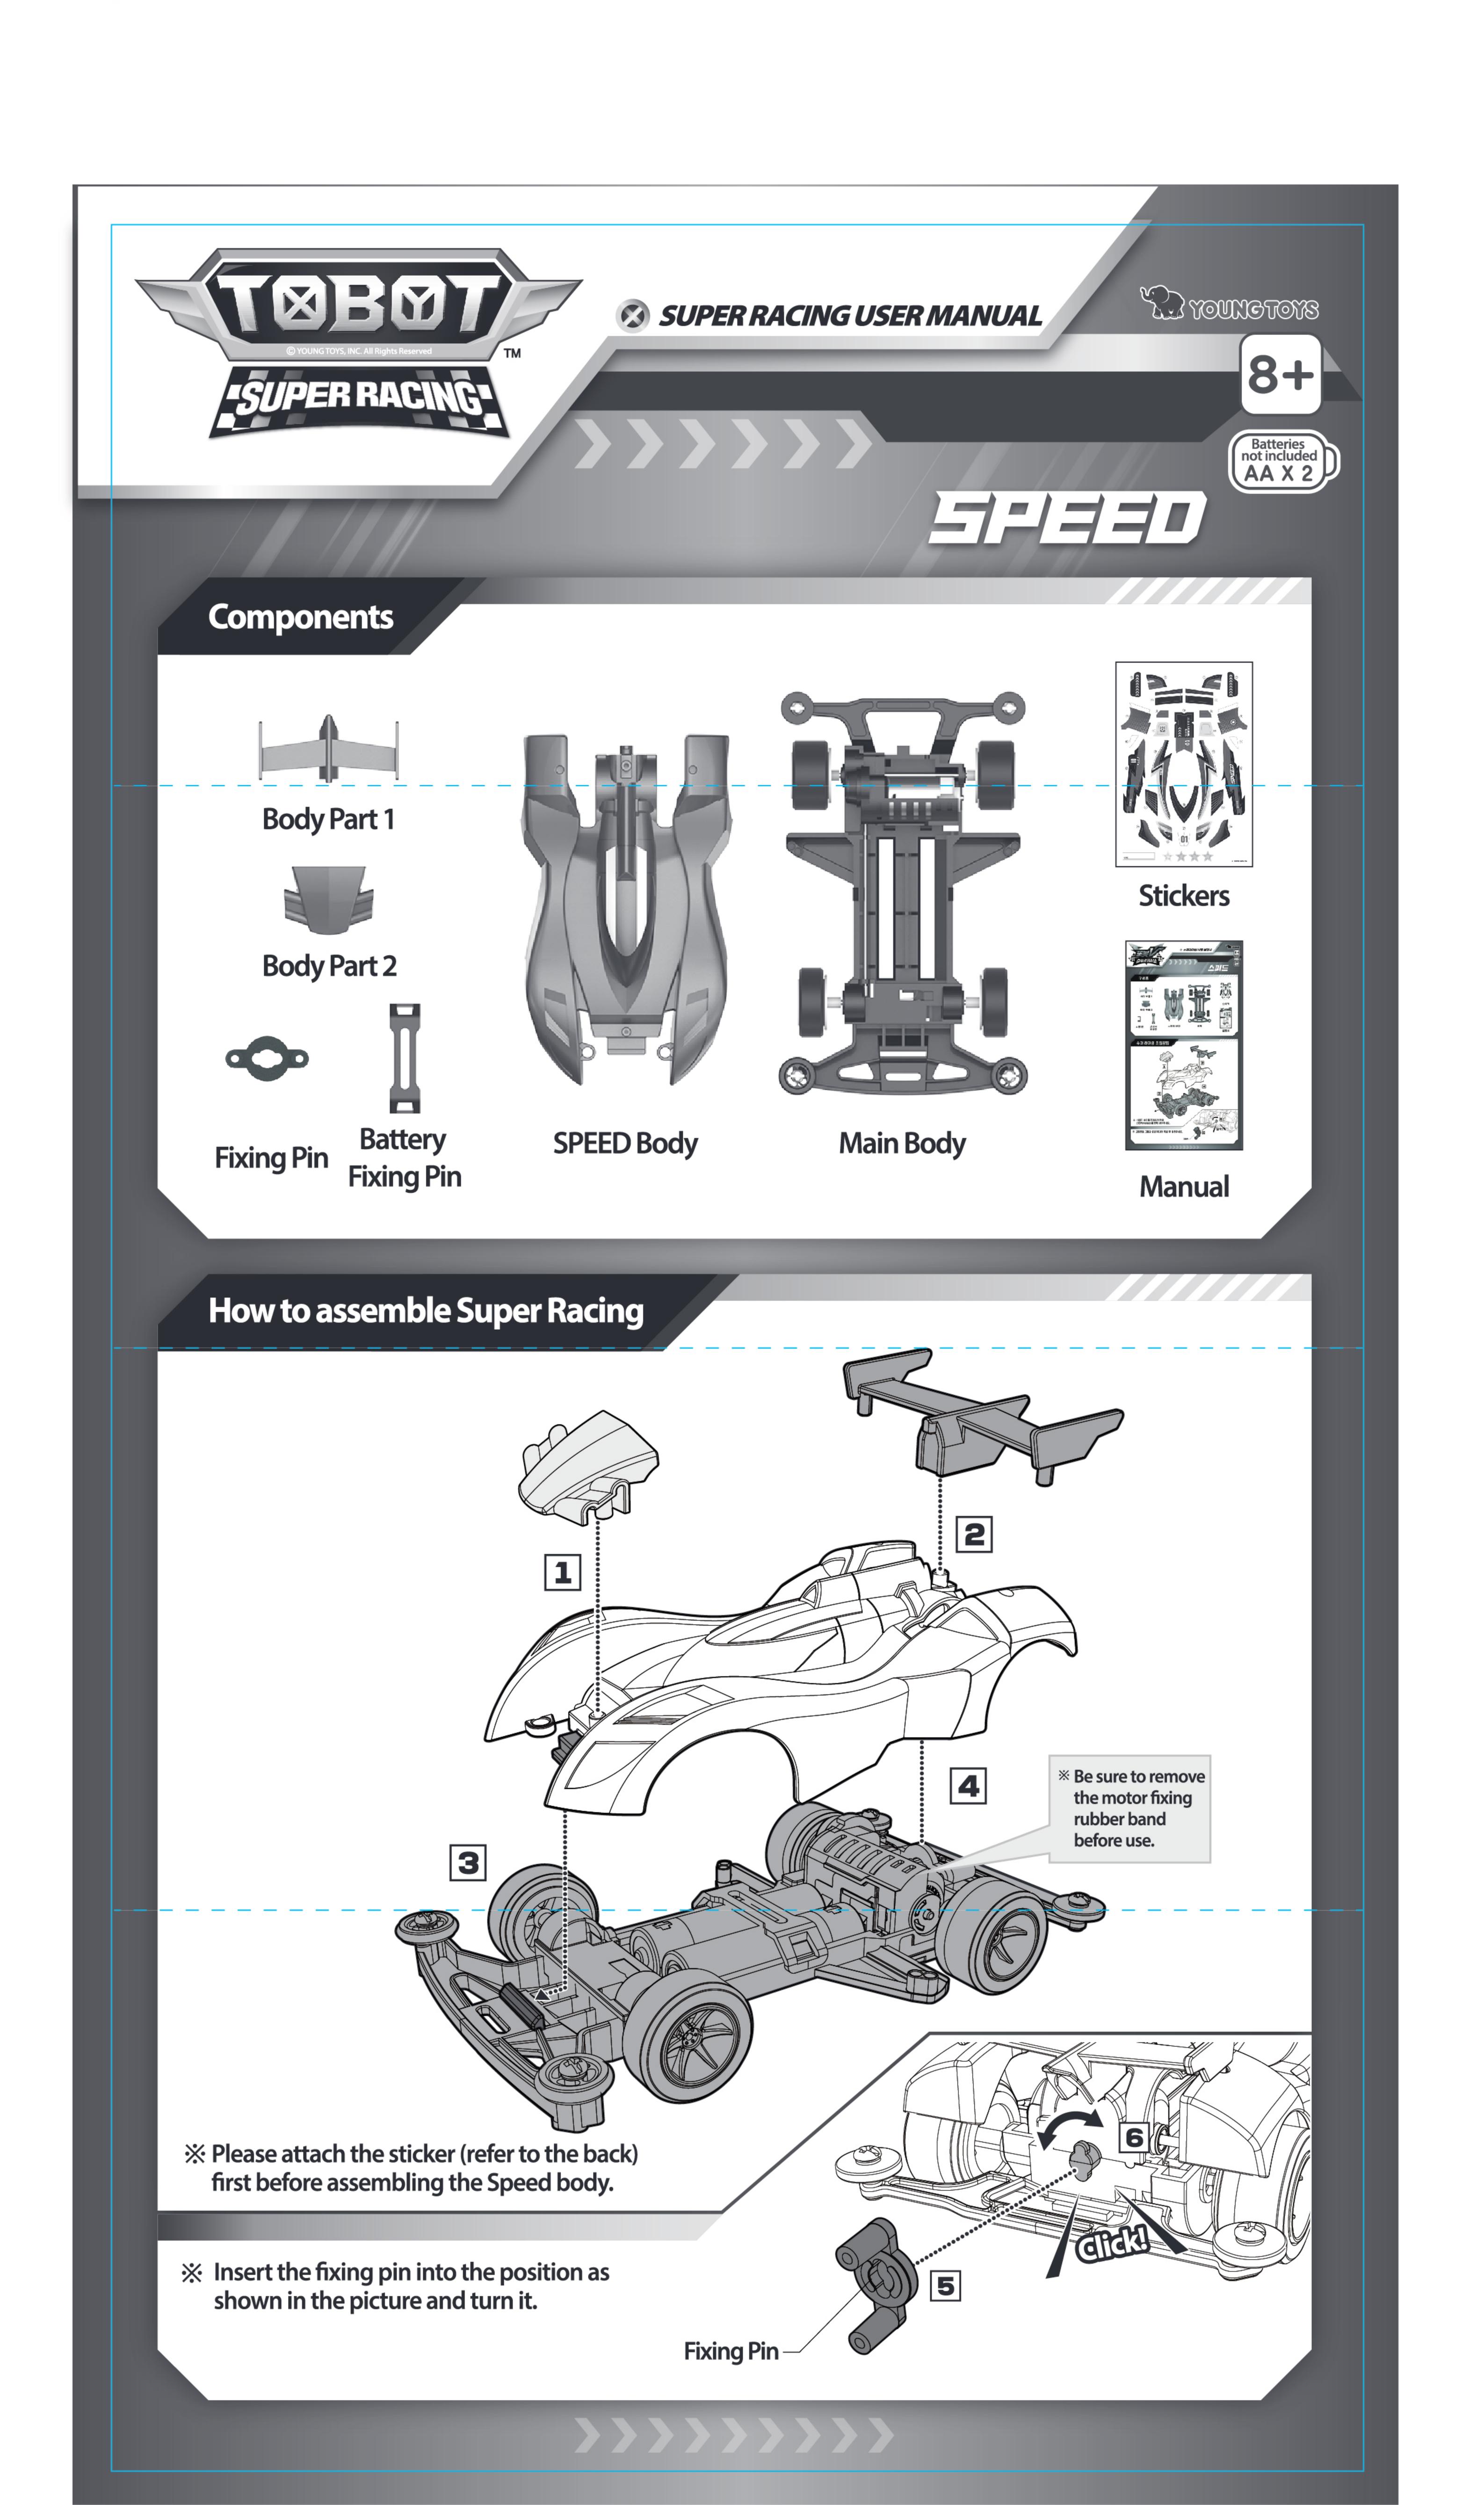


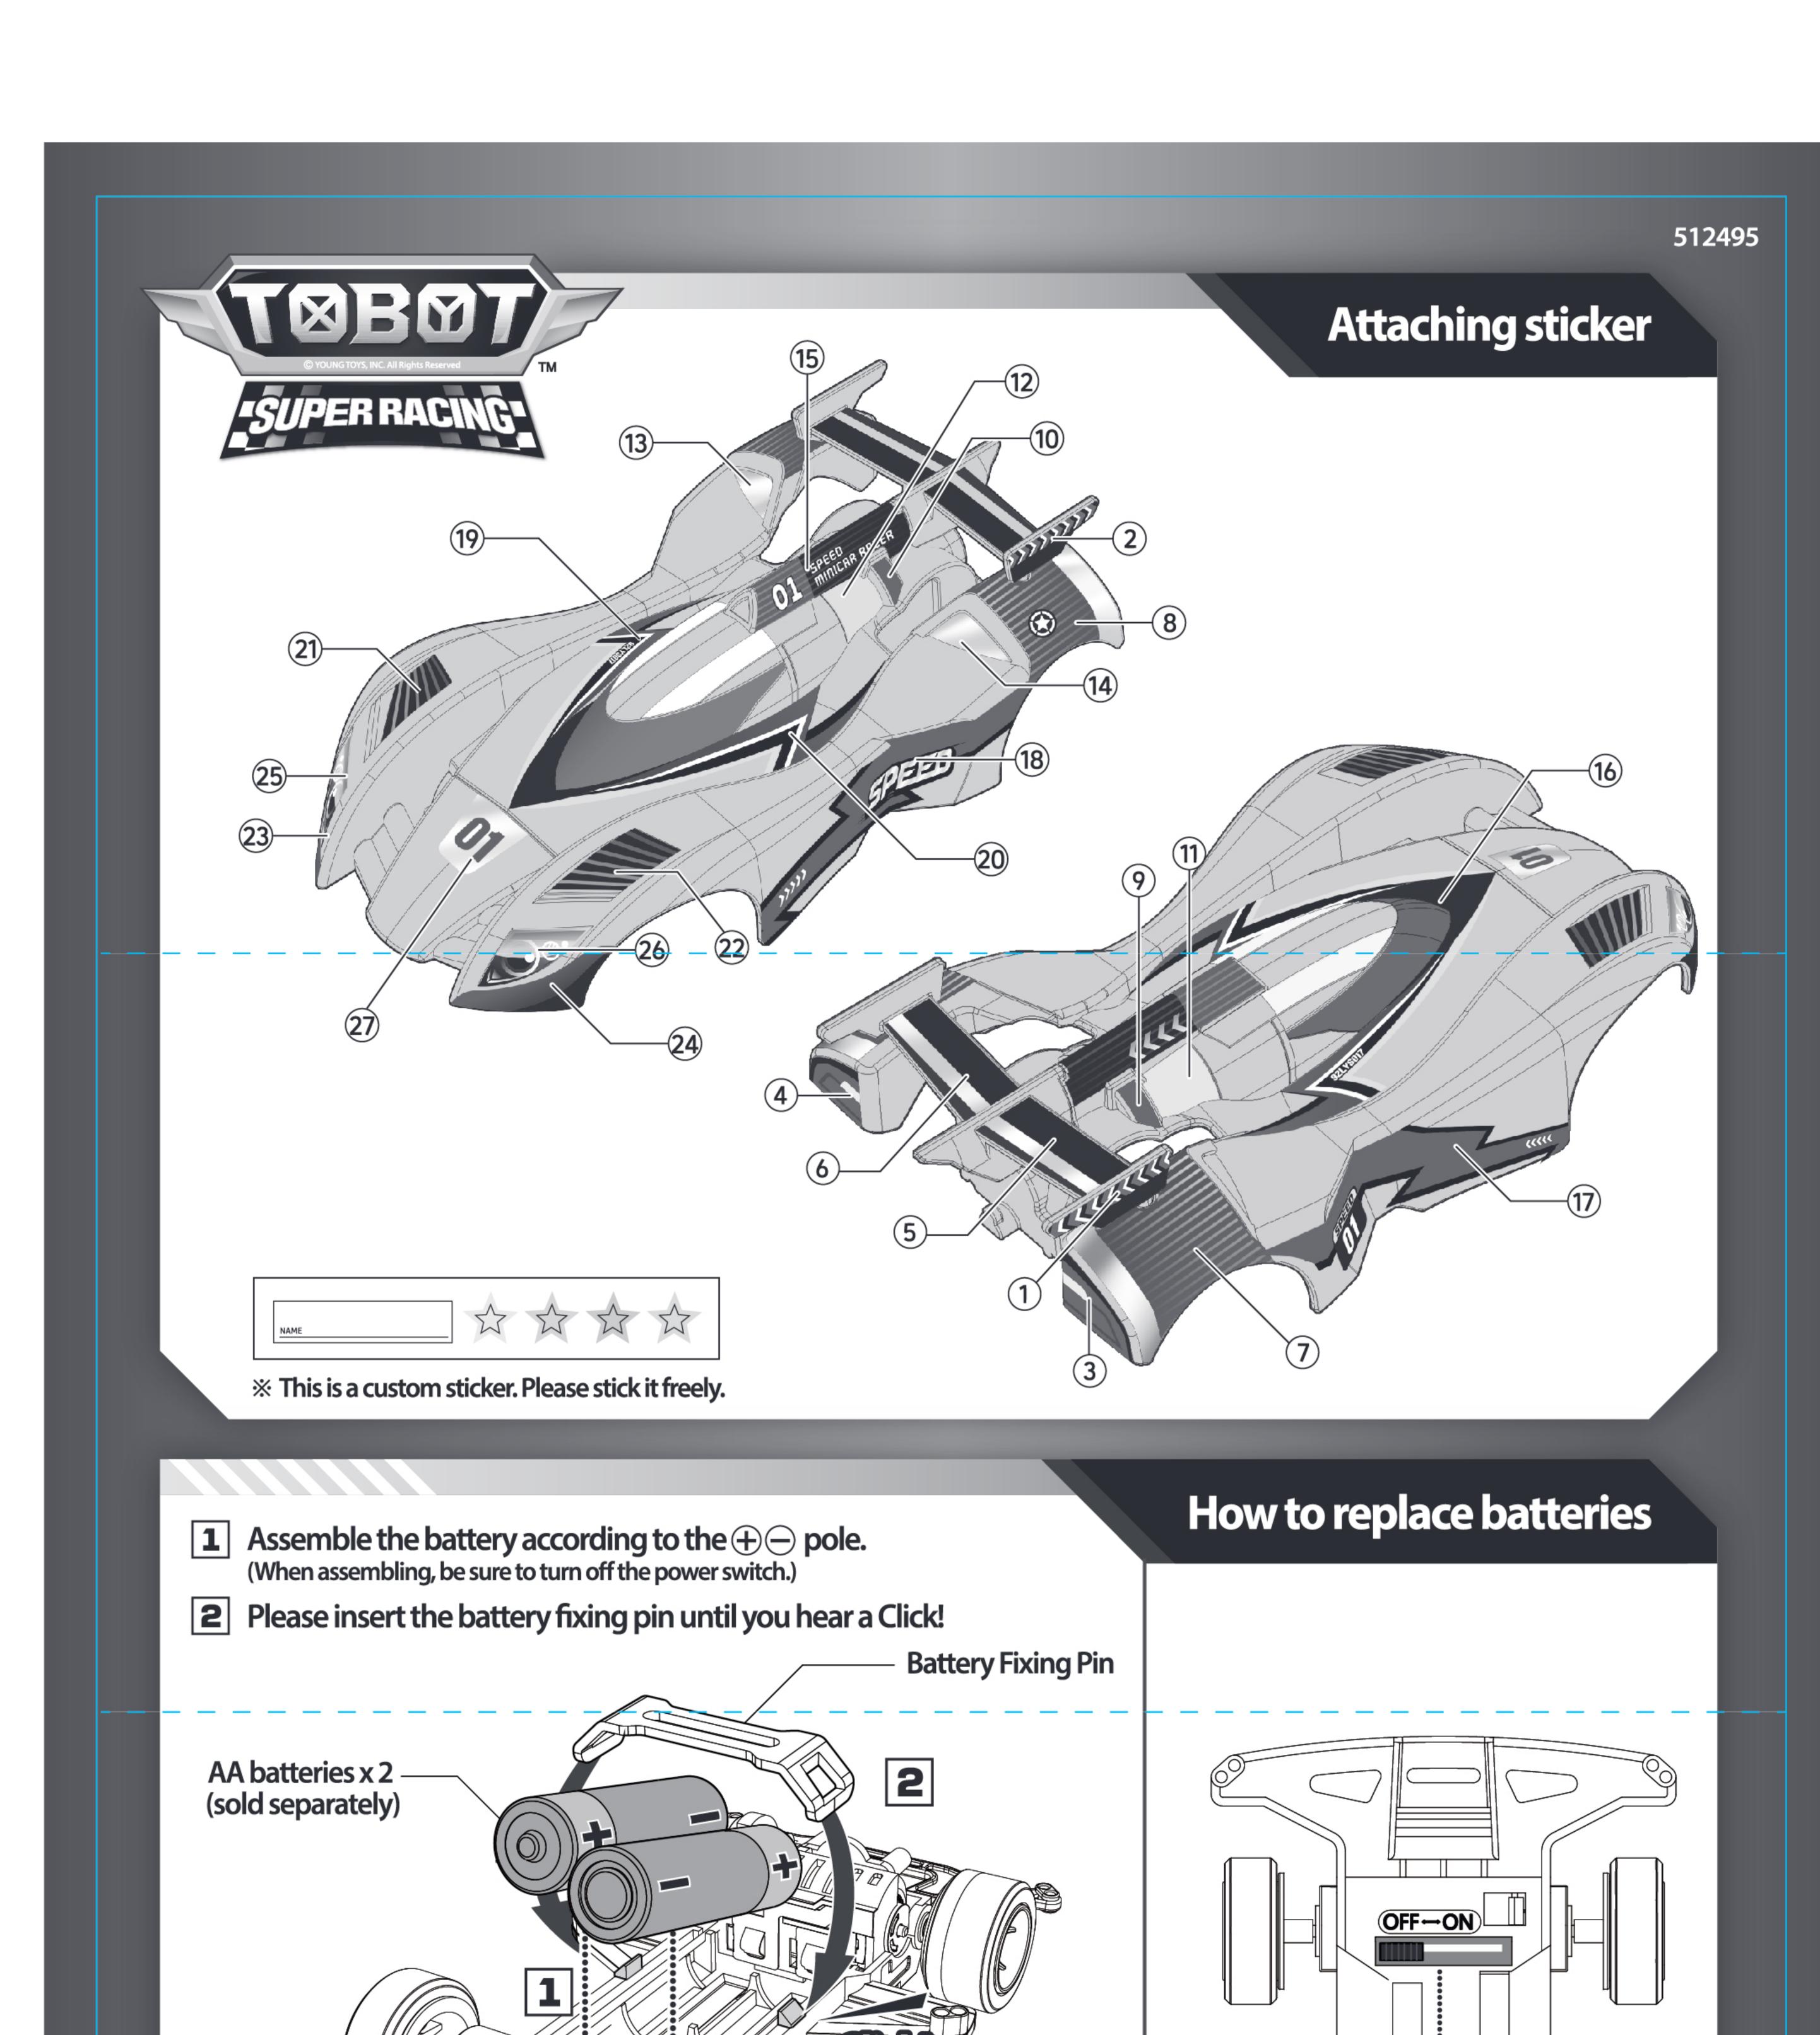

How to use batteries

Some batteries may not work. Try using other batteries again.

- Do not mix old and new batteries or use different forms of batteries together. Never use rechargeable batteries.
 Do not use batteries from different companies. This may cause batteries to leak and cause product malfunction.
- Do not use batteries from different companies. This may cause batteries to leak and cause product mailunction.
 Correctly insert the positive and negative sides of the battery. Failure to do so may result in overheating.
 Parents or guardians must help with the insertion and replacement of batteries.
 Remove the batteries when not using this product for more than a week. Battery fluid may leak and cause product malfunction.
 If the liquid leaking from the battery gets into your eyes, wash immediately and consult a doctor.
 If it gets on your skin or clothes, wash it off with water.
 Always turn off the product when not in use. There is a risk of battery discharge.
 When replacing the batteries, turn off the power, replace the batteries, and collect them separately.

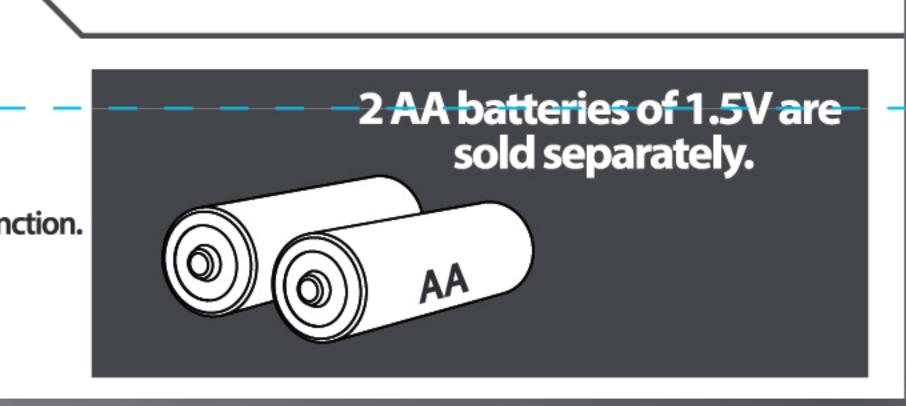

 $-\mathsf{OFF} \longleftrightarrow \mathsf{ON} \ -$

Always turn off the ON/OFF button

when the product is

not in use.

⚠ WARNING

-Parents must read.
-Never climb or step on it. -Applying a strong impact may cause injury to the damaged area.
-Never use it in places where there is a risk of falling, such as stairs.
-For safety, do not use disassembled, damaged or deformed ones.
-It is dangerous to throw the body or accessories at people or objects.
-Use with caution as there is a risk of your fingers getting caught in the body or components.
-Do not cut, charge, disassemble, heat, or dispose of in fire or water.
-Do not shake the body by force. There is a risk of damage.
-Please refrain from pressing the button with excessive force or pressing it continuously.
There is a risk of injury to the edges or corners of the product, so use with caution.
-Please use the product under the guidance of a guardian.
-After opening the packaging, please put it out of reach of children.
-After play is over, parents must keep it out of reach of children under the target age.
-Please refrain from turning the locking device with excessive force as it may cause damage.
-Be sure to read the precautions before using.
-Do not operate the minicar on the street, in puddles, or around children and in crowded areas. -Do not operate the minicar on the street, in puddles, or around children and in crowded areas.

-When running the minicar on the track, the minicar may unexpectedly leave the track.

Keep your face away from the track and make sure there are no dangers around you.

-When operating the minicar, do not touch the wheels as the motor heat can accumulate and damage the minicar.

-Keep hands, clothes and hair away from moving parts such as wheel gears.
-Be careful when stopping a running minicar as there is a risk of injury.
-Foreign objects such as lint or debris caught on the shaft shaft can interfere with rotation and cause the motor to overheat. Be sure to check before operation.
-Do not operate the minicar if the parts are damaged or deformed.
-The product may have sharp edges in function. Please be careful when using.



 This product contains small parts that can cause suffocation when swallowed. As such, children under 3 years of age may not use this product. Do not put the product in the mouth as it may release phthalate plasticizers.

MADE IN CHINA

*Please be noted the actual product and photos may differ *Do not throw away the components in the package, including the package. (The package contains important information.)

