

TAIYO®

12+

WATER DRONE

 
OWNER'S MANUAL • MANUEL D'UTILISATION • BEDIENTUNGSANLEITUNG •
MANUAL DEL PROPIETARIO • MANUALE D'ISTRUZIONI • MANUAL DO UTILIZADOR •
GEBRUIKERSHANDLEIDING • BRUKSANVISNING • KÄYTTÖOHJE •
BRUGSVEJLEDNING • BRUKERMANUAL • РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ



Important! Carefully read the Owners Manual before play!
Important! Lisez attentivement le manuel d'utilisation avant de jouer!
Wichtig! Lesen Sie diese Bedienungsanleitung vor dem Spielen sorgfältig durch!
Importante! Lee con cuidado el manual del propietario antes de ponerle a jugar.
Importante! Leggere attentamente il manuale dell'utente prima di giocare!
Importante! Leia atentamente o Manual do Proprietário antes de brincar!
Belangrijk! Lees de gebruiksaanwijzing zorgvuldig door voordat je met het product speelt!
Viktigt! Läs noga igenom ägarmanualen innan användning!
Tärkeää! Lue käyttöohje huolellisesti läpi ennen tuotteen käyttöä!
Viktig! Läs bruksanvisningen grundigt för bruk!
Viktig! Les brukermanualen nøye før du leker med bilen
Важно! Перед тем как играть, внимательно прочитайте руководство пользователя.



Li-ion

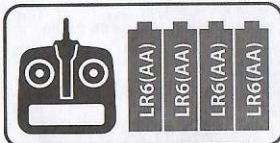

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

ITEM NO. 530000A

TOY SHOCK

©Toy Shock International Limited

 
 
Fabrique par / Manufactured by:
Toy Shock International Limited
Unit 302-303, 3/F, Tower B, New Mandarin
Plaza, 14 Science Museum Road,
Tsim Sha Tsui East, Kowloon, Hong Kong

 
 
 
 
Importé par / Imported by:
Toyshock Iberia, S.L.U.
C/ Guzman el Bueno 133,
Edif Britannia 5B
Madrid 28003, España

 
 
 
 
 
 
 
 
Toyshock LLC
123 Madeira Ave, Suite 203
Coral Gables,
Miami FL 33134, U.S.A.

www.toyshock.com









info@toyshock.com

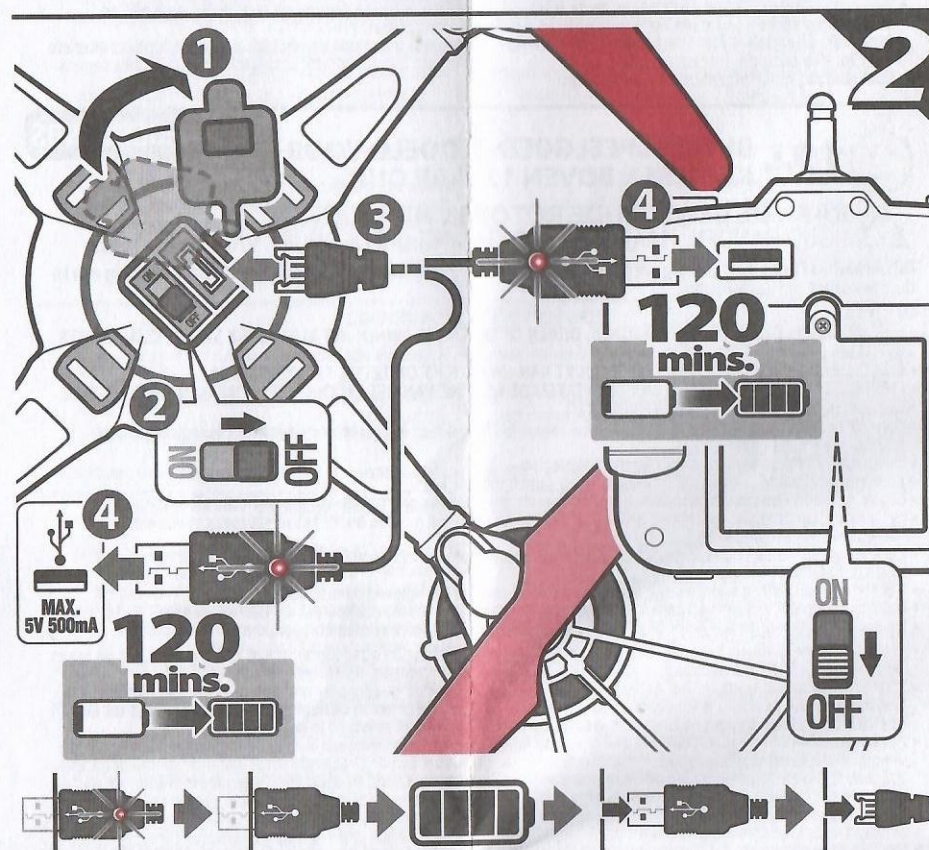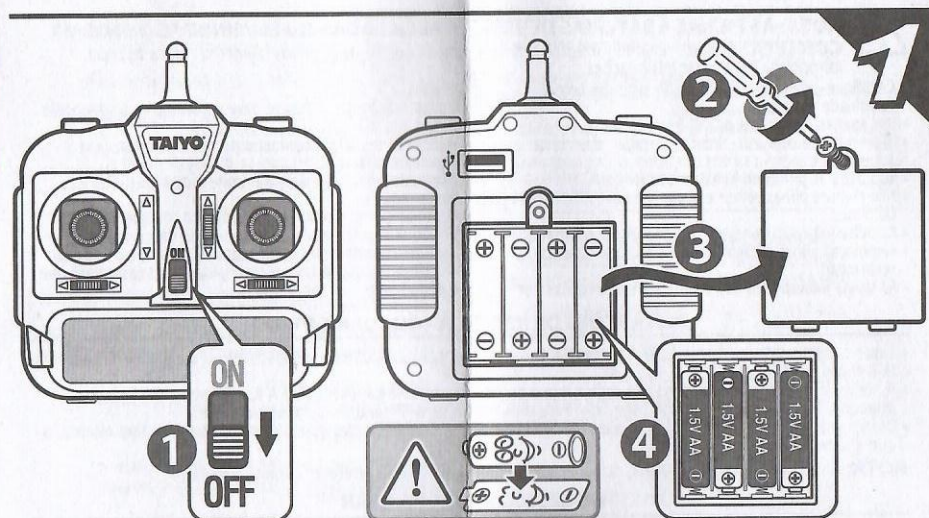

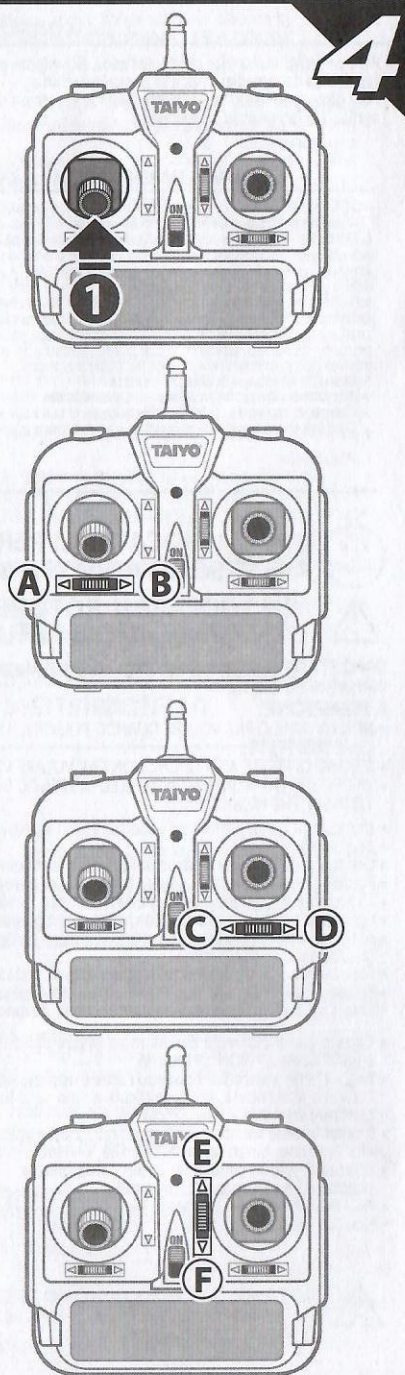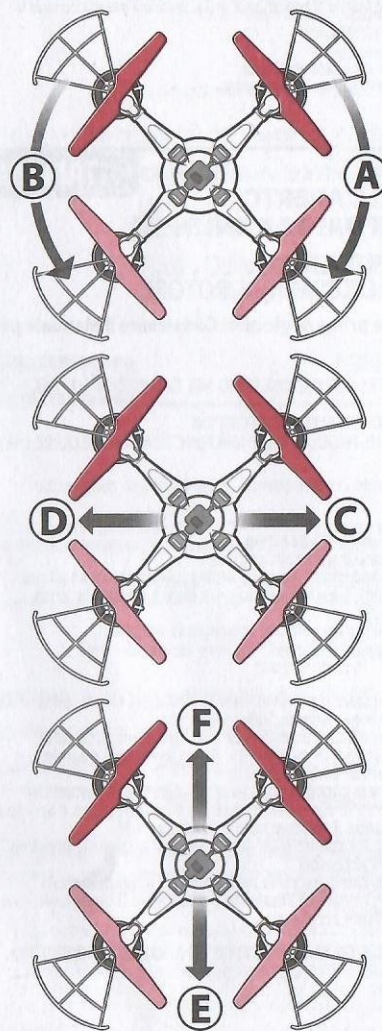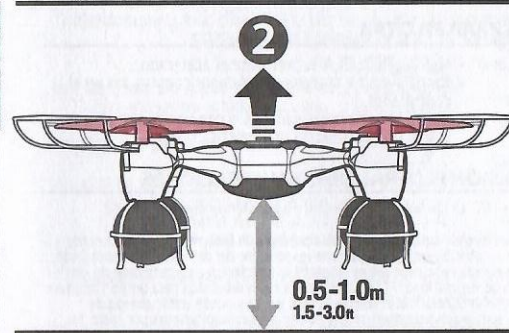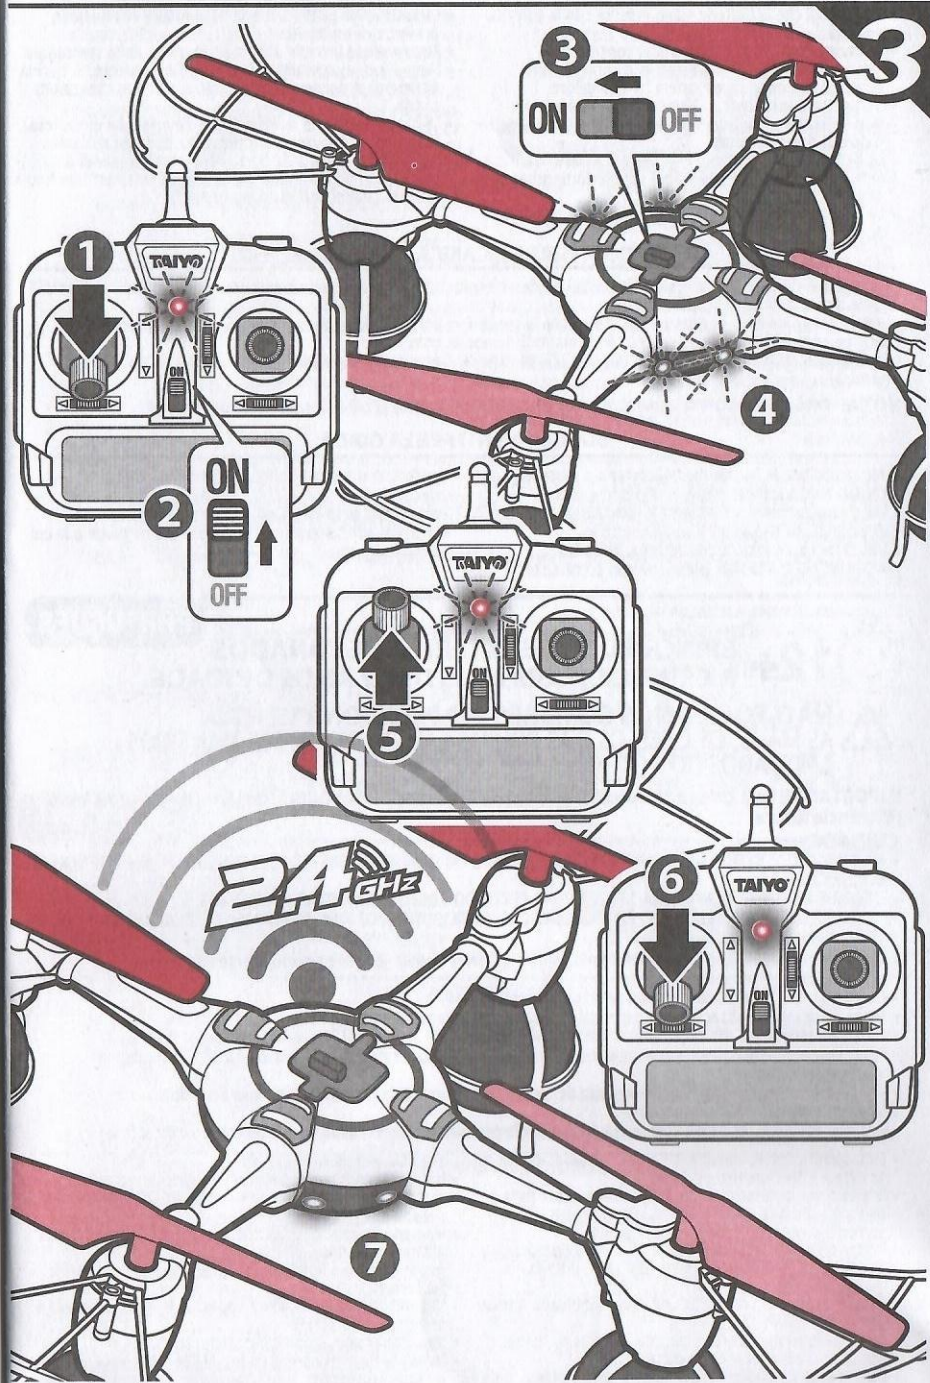


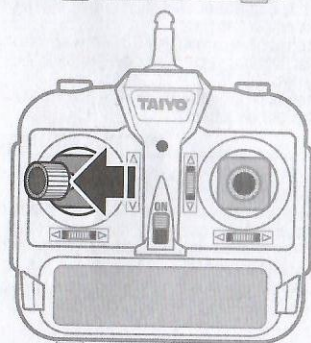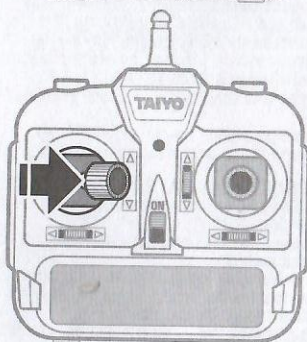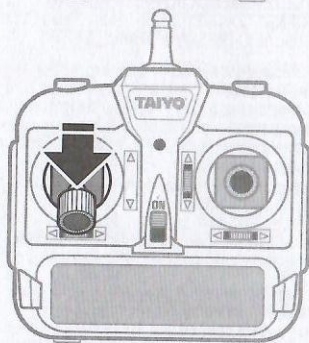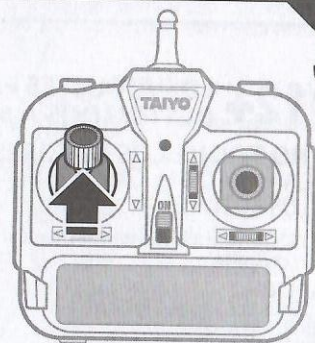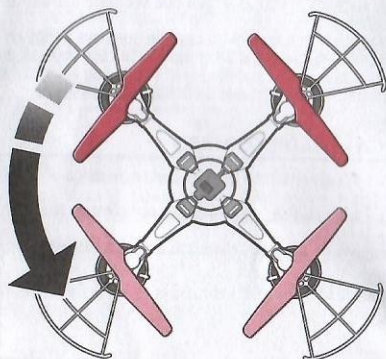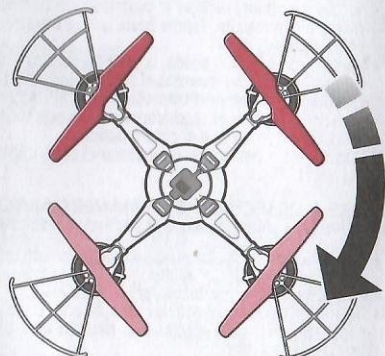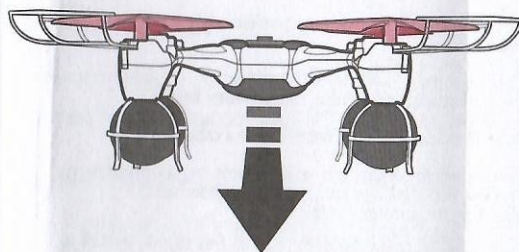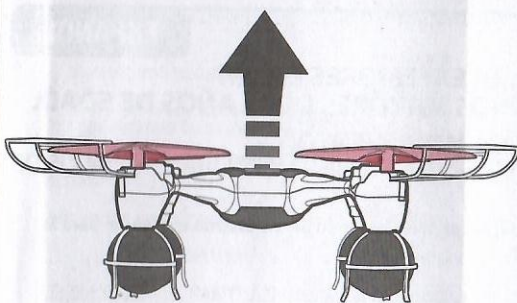







5

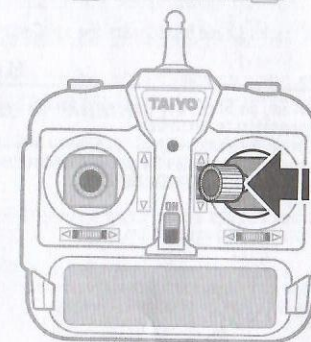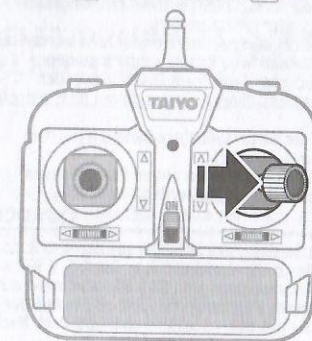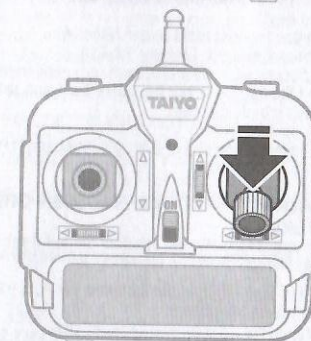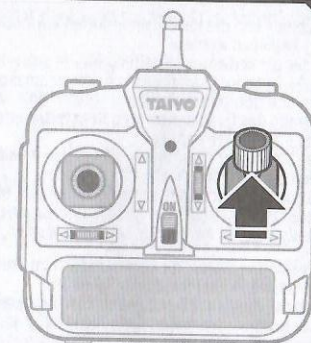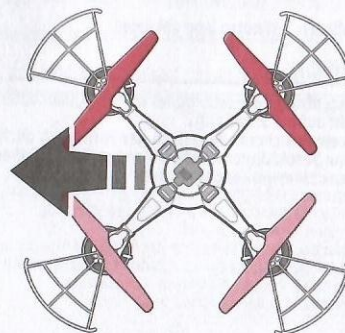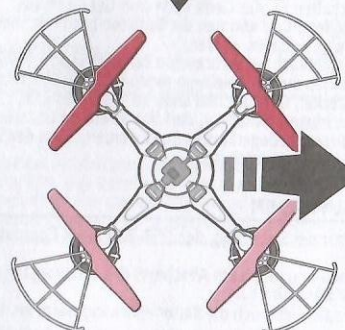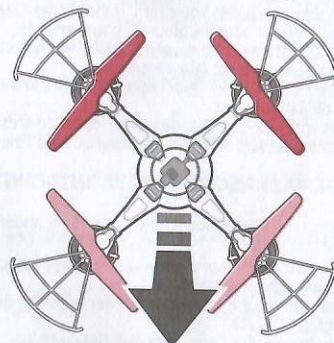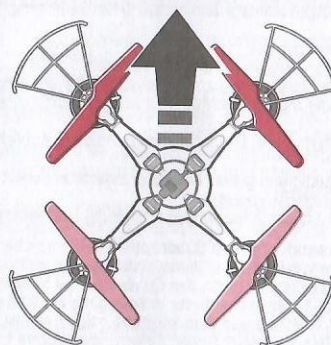        


6



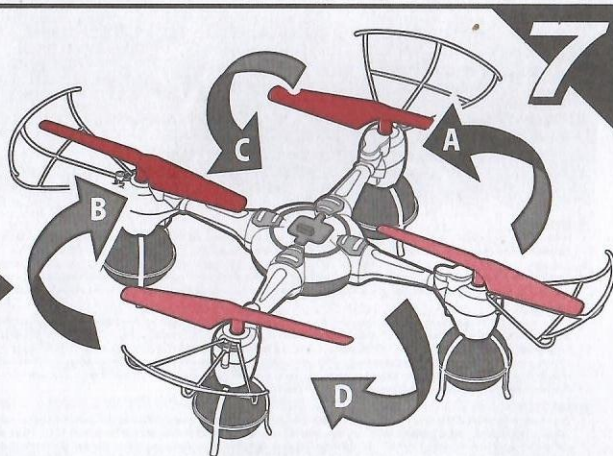 


       - HIGH / LOW SPEED
- HAUTE / BASSE VITESSE
- HOHE / NIEDRIGE GESCHWINDIGKEIT
- VELOCIDAD ALTA/BAJA
- ALTA / BASSA VELOCITÀ
- VELOCIDADE ALTA / BAIXA
- HOOG / LAAG Snelheid
- HÖG / LÅG HASTIGHET
- KORKEA / MATAALA NOPEUS
- HØJ / LAV HASTIGHED
- HØY / LAV HASTIGHET
- ВЫСОКАЯ / НИЗКА СКОРОСТЬ

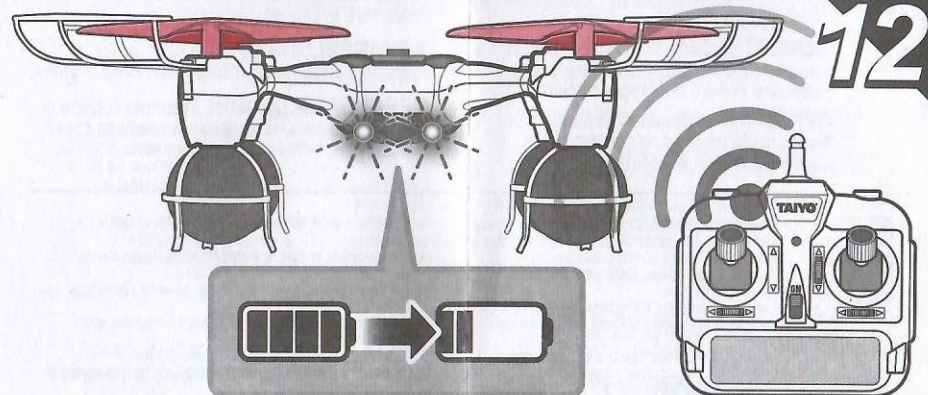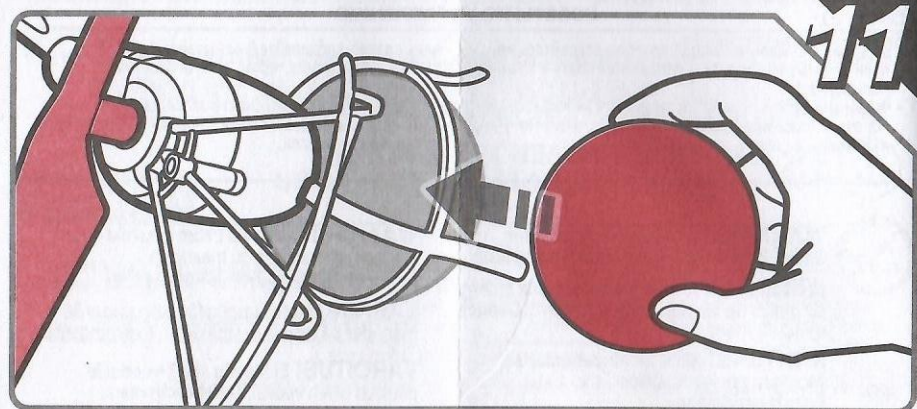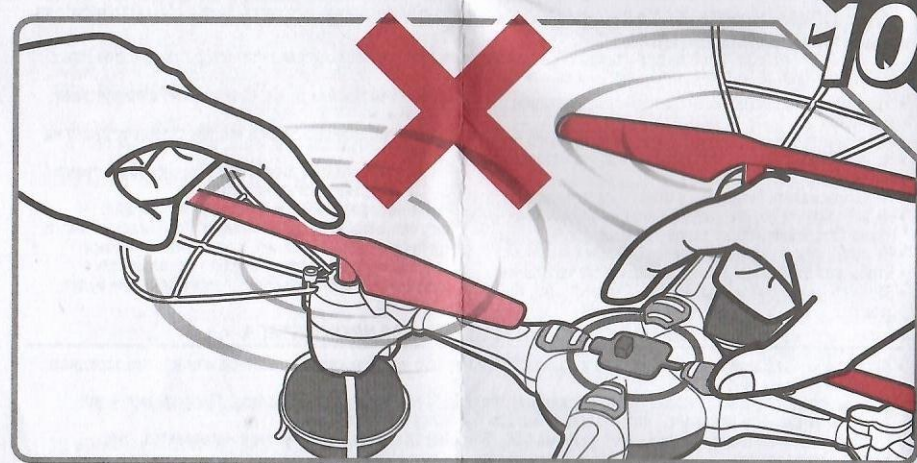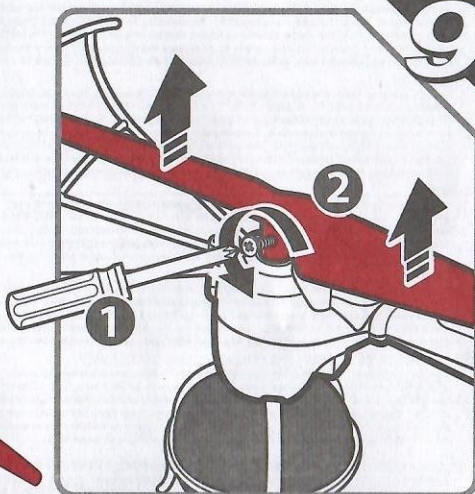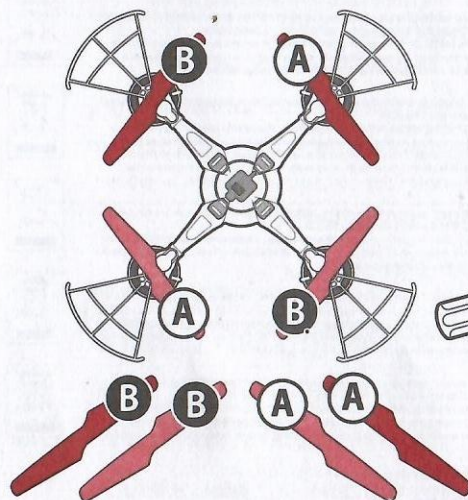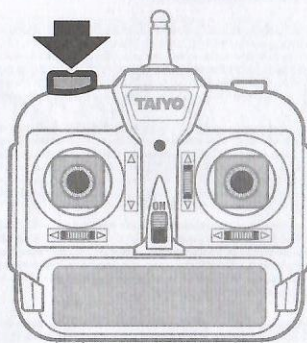

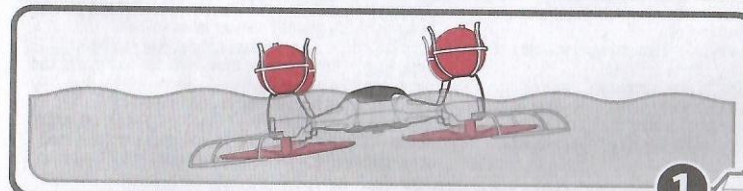

12

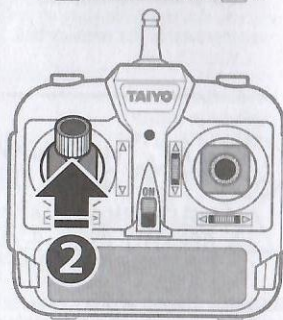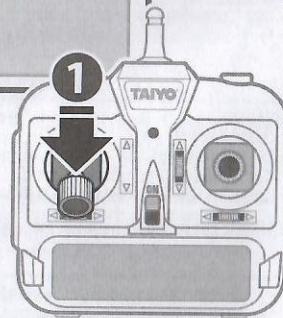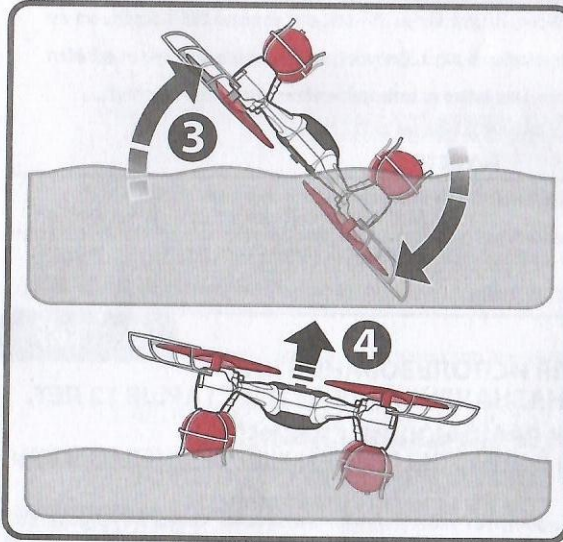   

13



12+ OUTDOOR TOYS INTENDED FOR CHILDREN OVER 12 YEARS OF AGE.

ENGLISH



DO NOT TOUCH THE RUNNING ROTORS.
HANDS, HAIR AND LOOSE CLOTHES SHALL BE KEPT AWAY FROM THE ROTORS.

IMPORTANT! Carefully read the Owners Manual before play! Keep the Manual for later reference.

CAUTION:

- DO NOT START UP AND FLY WHEN PERSONS, ANIMALS OR ANY OBSTRUCTIONS ARE WITHIN THE FLYING RANGE OF THE QUADCOPTER.
- RISK OF EYE INJURIES: DO NOT FLY NEAR YOUR FACE TO AVOID INJURIES.
- UNDER THE ENVIRONMENT WITH ELECTROSTATIC DISCHARGE, THE PRODUCT MAY MALFUNCTION AND REQUIRE USER TO RESET THE PRODUCT.

- Only operate the quadcopter and its accessories when fully assembled and in accordance with this manual!
- Keep the instructions manual for later reference.
- Before first use. Read the instruction manual together with your child.
- Operations and safe use must be explained (preferably by graphical illustrations).
- Flying the quadcopter requires skill and children must be trained under the direct supervision of adult.
- Check if the quadcopter is assembled as instructed. Assembly shall be performed under the supervision of adult.
- The toy is to be operated in water only when fully assembled in accordance with the instructions.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The supply terminals are not to be short-circuited.

- This quadcopter is intended to be used only outdoors - NOT to be indoors.
- Start and fly only when the area is appropriate for the intended use (free area, no obstacles) and only within direct visual contact.
- Start and fly is strictly forbidden near high voltage poles railway tracks, roads, swimming pools or open water.
- Only operate under good visibility and clam weather conditions.
- Intended for children age 12 and older.
- Never fly in a place cluttered with obstacles.

- Operate the quadcopter in a safe area away from people, pets, cars, etc.
- Do not touch or try to pick up the quadcopter when it is in motion. Wait until it has stopped completely.
- Keep hair, fingers, face and loose clothing away from the running rotors while the quadcopter is switched on or while the controller is operating.
- Do not drop or give impact to the quadcopter and its accessories.
- Do not change or modify anything on the quadcopter.
- Never attempt to disassemble or modify the quadcopter or its accessories.



NOTE: BATTERIES MUST BE RECYCLED OR DISPOSED PROPERLY.
Contact your local area office of solid waste management or other appropriate local agency for information.

- Make sure the batteries are inserted with correct polarity.
- Use only battery type(s) recommended.
- Do not attempt to short-circuit, charge, disassemble or heat batteries.
- Do not dispose of batteries in fire or make them wet.
- Do not mix or use new and old or different types of batteries together.
- Non-rechargeable batteries are not to be recharged.
- Remove rechargeable batteries from the product before charging.
- Rechargeable batteries are only to be charged by adult.
- Battery replacement should be done in presence of an adult.
- Remove batteries from the product for storage.
- After use, be sure to turn the switch off. Failure to do so may adversely affect batteries, resulting in disabled charged.
- Exhausted batteries are to be removed from the toy.
- Regularly examine for damage to the plug, enclosure and other parts, in the event of any damage, the toy must not be used with the transmitter charger until the damage has been repaired.

RECHARGING INSTRUCTIONS - QUADCOPTER

- Connect the USB charging cable into the controller USB port, computer USB port or other USB charging port as shown (MAX. 5V 500mA).
- The red light on the USB charging cable indicates that charging proceed. The red light off when charging process completed. Can have about 6-7 minutes of flight time per every charging.
- Unplug the USB charging cable from the USB charging port. After charging, the battery pack will feel warm. This is normal.

NOTE: Before recharging the battery, please let the battery pack on quadcopter cool down for 5 minutes.

PILOTING HINTS

- For controlling the sticks on the controller, try NOT to push the sticks immediately to the extreme position.
- For turning give short and small inputs to the direction stick. Very gently ADD/REDUCE the throttle.
- Always focus on the quadcopter not on controller.
- Never use parts that are damaged or have altered shape in this quadcopter to ensure safe practice.
- The quadcopter should not be flown in HIGH WINDS or near a pool.



12+

**ИГРУШКИ ДЛЯ ИСПОЛЬЗОВАНИЯ ВНЕ
ДОМА ПРЕДНАЗНАЧЕНЫ ДЛЯ ДЕТЕЙ СТАРШЕ 12 ЛЕТ.**

РУССКИЙ



**НЕ ПРИКАСАЙТЕСЬ К ВРАЩАЮЩИМСЯ ВИНТАМ.
ДЕРЖИТЕ РУКИ, ВОЛОСЫ И НЕПЛОТНО ПРИЛЕГАЮЩИЕ ПРЕДМЕТЫ ОДЕЖДЫ
ПОДАЛЬШЕ ОТ ВИНТОВ**

ВАЖНО! Перед игрой внимательно прочтите Руководство пользователя! Храните Руководство для использования в дальнейшем.

ОСТОРОЖНО!

- НЕ ЗАПУСКАЙТЕ И НЕ ПИЛОТИРУЙТЕ КВАДРОКОПТЕР, ЕСЛИ В РАДИУСЕ ЕГО ДЕЙСТВИЯ НАХОДЯТСЯ ЛЮДИ, ЖИВОТНЫЕ ИЛИ КАКИЕ-ЛИБО ПРЕПЯТСТВИЯ.
- РИСК ТРАВМИРОВАНИЯ ГЛАЗ. НЕ ПОЗВОЛЯЙТЕ КВАДРОКОПТЕРУ ПОДЛЕТАТЬ БЛИЗКО К ЛИЦУ.
- В СРЕДЕ С ЭЛЕКТРОСТАТИЧЕСКИМ РАЗРЯДОМ УСТРОЙСТВО МОЖЕТ ФУНКЦИОНИРОВАТЬ НЕПРАВИЛЬНО; НЕОБХОДИМО ВЕРНУТЬ ЕГО В ИСХОДНОЕ СОСТОЯНИЕ.
- Используйте квадрокоптер и принадлежности только в полностью собранном виде и в соответствии с этими инструкциями.
- Храните инструкции для использования в будущем.
- Перед первым использованием прочитайте инструкции вместе с ребенком.
- Для инструктажа по эксплуатации и безопасности используйте наглядные иллюстрации.
- Для управления квадрокоптером требуются специальные навыки. Обучение детей должно происходить под наблюдением взрослых.
- Убедитесь, что квадрокоптер собран правильно. Сборка должна происходить под наблюдением взрослых.
- Игрушка может работать в воде только в полном сборе, в соответствии с указаниями руководства.
- Сетевой шнур замене не подлежит. Если сетевой шнур поврежден, устройство необходимо сдать на утилизацию.
- Этот квадрокоптер предназначен для использования только за пределами помещения.
- Запускайте и пилотируйте квадрокоптер только в подходящих для этого местах (свободное пространство, отсутствие препятствий) и только при наличии прямого визуального контакта.
- Запрещается запускать и пилотировать квадрокоптер рядом с высоковольтными ЛЭП, железнодорожными путями, дорогами, плавательными бассейнами и открытыми водоемами.
- Используйте только в безветренную погоду и в условиях хорошей видимости.
- Предназначено для детей от 12 лет и старше.
- Запускайте квадрокоптер в безопасном месте, подальше от людей, домашних животных, автомобилей и т. д.
- Не прикасайтесь к летящему квадрокоптеру и не пытайтесь его схватить. Дождитесь, пока квадрокоптер полностью остановится.
- Если включен квадрокоптер или работает пульт управления, держите пальцы, волосы, лицо и неплотно прилегающие предметы одежды подальше от вращающегося винта.
- Не бросайте и не ударяйте квадрокоптер и принадлежности.
- Не вносите изменения в конструкцию квадрокоптера.
- Не разбирайте квадрокоптер и принадлежности и не пытайтесь внести изменения в их конструкцию.