

Baby Safety Seat

User Instruction

- ⊙ Universal
- ⊙ Applicable for 9-36kg children (approximate 9 months - 12 years old)
- ⊙ Detachable seat base, used as a booster
- ⊙ Shoulder strap 3 levels adjustable
- ⊙ With inner headrest



Read the instruction carefully before using the baby car seat.
Keep this instruction well for future reading.
This corporate is certificated by ISO9001:2008.


Baby safety seat

Warranty Card

Name: _____	Phone: _____
City: _____	Post Code: _____
Email: _____	Address: _____
Model: _____	Type: _____
Color: _____	Retailer: _____
Purchasing time: _____	Signature: _____

Notice

1. This is a "Universal" children restraint system (CRS) which is approved to ECE Regulation No.44/04 series of amendments and GB27887-2011, for general use in vehicles and it will fit most, but not all, car seats.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle capable of accepting a "Universal" child restraint for this age group.
3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. If in doubt, consult either the child restraint manufacturer or the retailer.



Warning

Please read this instruction and the relative part of your vehicle manual. Please follow this instruction while installing and using this baby car seat. Not following this instruction may lead to a severe injury or death to your child. Please keep this instruction in a safe place in case of future reading.

Note: this manual is only for reference, please prevail in kind!

Baby safety seat

Content

1 Application scope	03
2 Using Note	03
3 Part List	06
4 Baby safety seat assembly	08
5 Safety belt installation of Group I	09
5.1 Diagram of safety belt installation	09
5.2 Fix the car seat by car seat belt	10
6 Usage of 5-point harness system	12
6.1 Using Of 5-point harness	12
6.2 Height adjustment of 5-point harness	12
6.3 Fixation of 5-point harness	14
7 Baby fixation of group II III	16
7.1 Using diagram of group II III	16
7.2 Baby fixation of group II III	17
8 Baby fixation of group III	19
9 Maintenance of baby car seat	20
9.1 Cleaning of cloth cover	20
9.2 Dismantlement of cloth cover and 5 points harness	20
9.3 Installation of cloth cover and 5 points harness	23
10 Warranty condition and warranty card	28

1. Application scope

Certificated by ECE R44/04 and GB27887-2011, this baby safety seat is applicable for Group I II III.

Baby safety seat	Group	Range of baby weight
BC702F	I II III	9-36kg

Certification

●This baby safety seat is designed and tested with the European Children Rstraint System standard (ECE R44/04) and the Chinese Children Rstraint System standard (GB27887-2011). The certification stamp E mark (in the round circle) with approval number and the CCC mark (in the ellipse circle) can be found on the labels (in the bottom side of this seat).

●Any modification of this seat by you will lead to invalidity of the certification. Nobody is authorized to modify baby safety seat unless the baby safety seat manufacturer.

2.Using note




Warning

●B-fix connectors are only used for securing child safety

seats in a non-ride condition and are not used as a child restraint system A part!


- Please read this instruction very carefully before using this car seat. Not following this instruction may lead to an injury to your baby.
- Using car seat correctly is very important to your baby.
- Please keep the instruction and collection bag well of convenience in the future.
- Do not leave your baby alone in this baby safety seat in your car.
- Installeing to a seat of your car which has a SRS system is forbidden.

Baby safety seat

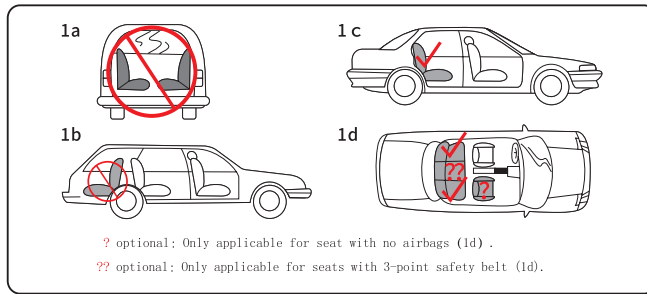

- Do not use this car seat in seating positions where an active frontal airbag installed, better install to the back seat of the car.
- Only suitable if the approved vehicles are fitted with 3 point safety-belts with retractor, approved to UN/ECE Regulation Np.16 or other equivalent standards.
- After crash accident, the damage of the the baby car seat may not be found instantly, but it is not safe any more, therefore, please change a new one.
- The car seat must be fixed well, even there is no baby in the car, because it may hurt other passengers in case of crash or a sudden brake.
- Do not use any lubricant to the moving parts of the car seat.
- Do not use the car seat without cloth cover. Please return the cloth cover to the original state after leaning.
- Do not refit the car seat, because it will change the safety performance of the car seat.
- Do not expose the car seat to burning sun, the metal and plastic parts of the car seat may be brning hot. Please check the temperature of the car seat before fixing baby to avoid hurting baby. Also burning sun may fake the color.

- Use 2-point car belt to fix your baby safety seat may lead to sever injury or death to your child if crash happened.
- Please tell your baby not to play with the buckle.

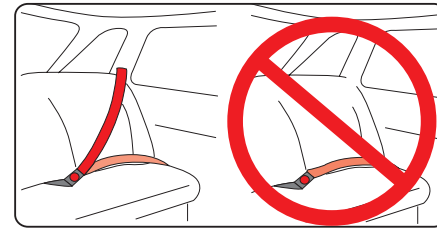


Danger

- 2-point car belt is forbidden to fix your baby.
- Please install the car seat and parts correctly according to the User Instruction, to ensure car seat not stuck by the door or seat of car.
- Belt should be installed correctly, ensure the belt be in the pelvis.
- No twine or twisting of the belts.
- Car seat must be changed after strong crash.
- Car seat without our certification and user instruction or refitted is very dangerous.
- Do not leave baby alone on the car seat.
- Luggage and other items should be properly placed after car crash.
- Car seat without cloth cover cannot be used, cloth cover not provided by manufacturer cannot be used, it influences the performance of car seat.
- Force bearing point unmarked cannot be used when installing, any doubt please contact manufacturer or the ratailer.


Baby safety seat

3.Part List

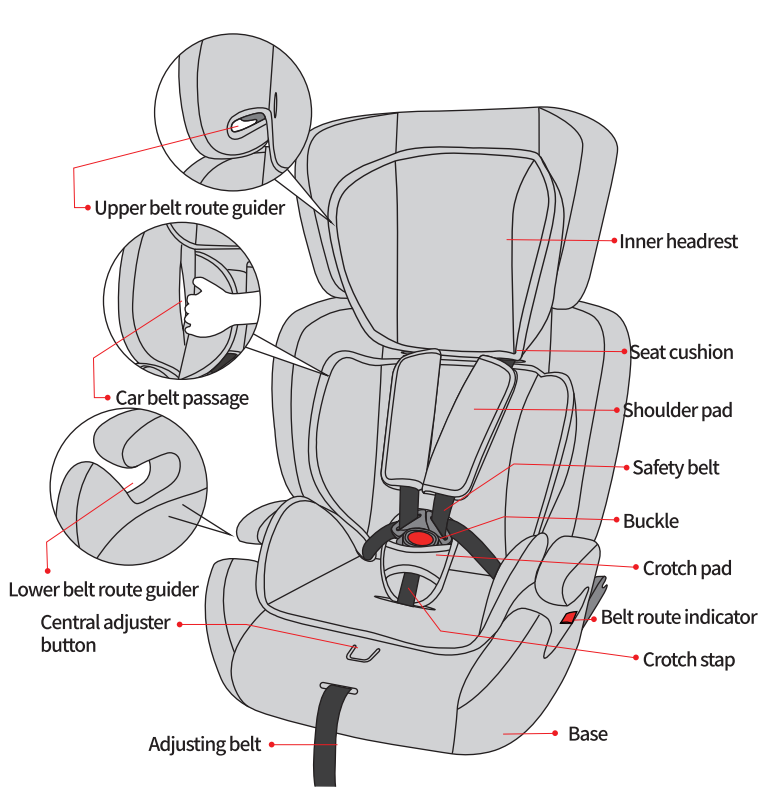


Baby safety seat

4. Baby safety seat assembly

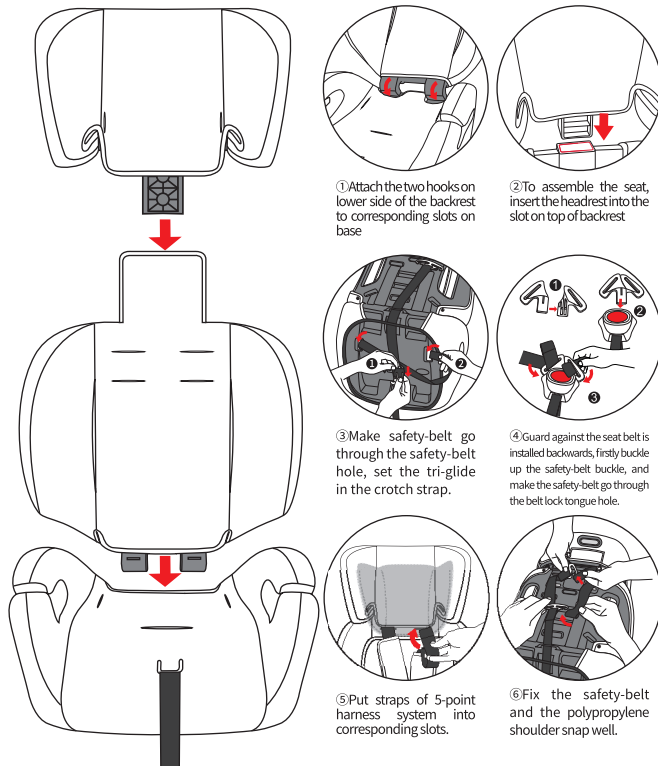

5. Safety belt installation of Group I


5.1 Diagram of safety belt installation

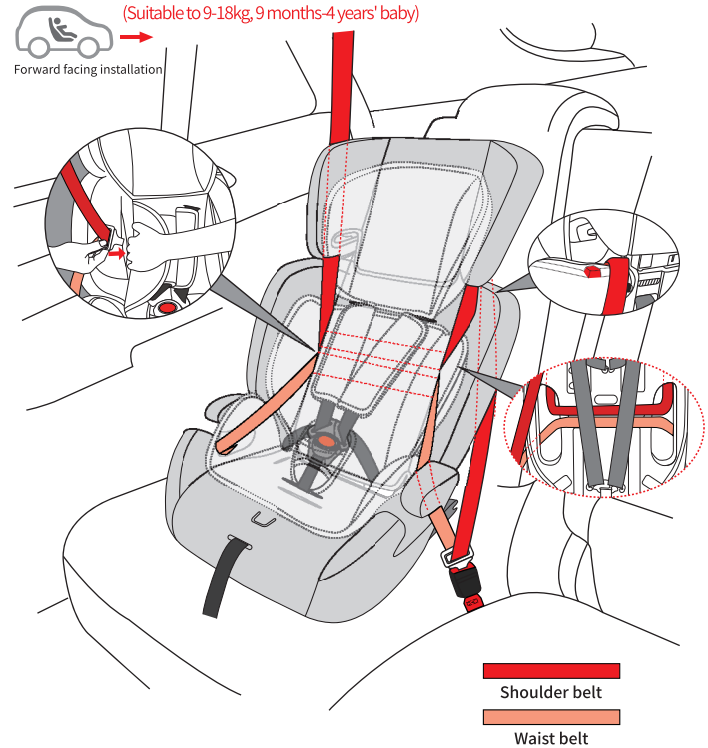

Baby safety seat



5.2 Fix the car seat by car seat belt

●Put the baby car seat onto the car seat along the driving direction. (Figure 1)

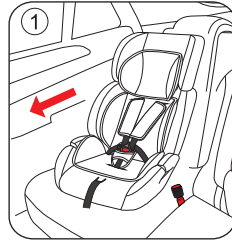


●Pull out the car belt long enough. Then let the car belt pass through the car belt passage behind the seat cushion. (Figure 2)

Notice: the car belt must pass through the passage from the front side of the seat firstly, then go beneath the safety belts and reach the other belt passage, and then come out of the passage from the back side to the front side. The car belt must not hold down the safety belts of baby car seat.

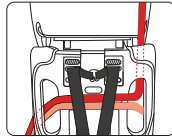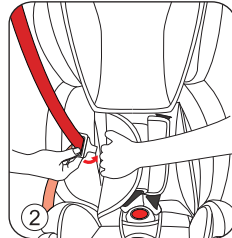


The car belt goes beneath the safety belts and reaches the other belt passage, and then comes out of the passage from the back side to the front side.


●Open the seat cushion and pull the car belt out of the belt passage. (Figure 3)

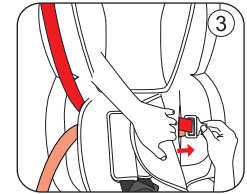


●Lock the car belt until you hear a "click" sound. (Figure 4)

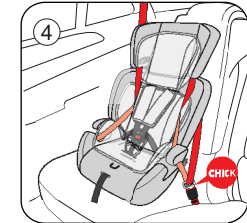

●Following the order ① ② ③ ④, fasten the car belt with hands. Now the installation is complete. (Figure 5)

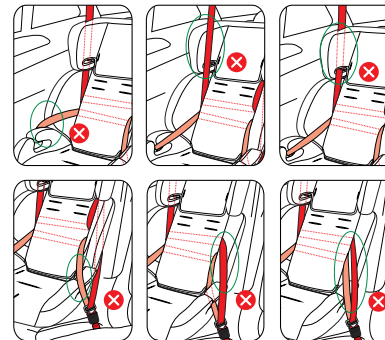

Several incorrect car belt installations

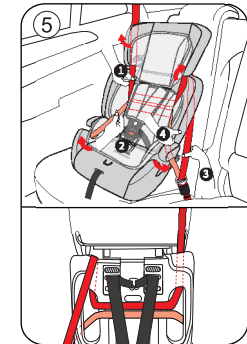


Baby safety seat


6. Usage of 5-point harness system

6.1 Using Of 5-point harness

●Extend the safety belt —Push the central adjuster with one hand and pull outward the safety belts with the other hand(**caution! do not pull the shoulder pad**). (Figure 6)

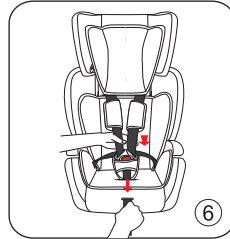


●Tighten the safety belt - pull the adjusting strap along the arrow direction. (Figure 7)

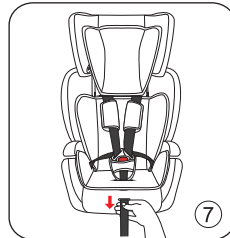


6.2 Height adjustment of 5-point harness


●Firstly extend the safety-belt (Refer to Figure 6), and take down the safety-belt from the Tee buckle on the back of the backrest (Figure 8).

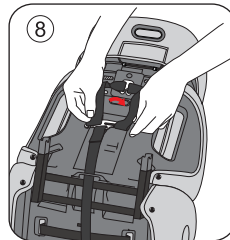

●Pull open the polypropylene shoulder strap mounting clamp (Figure 9).

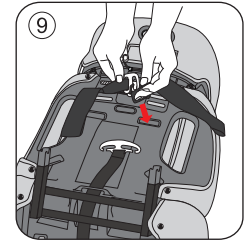


●Pull safety belts and shoulder straps out of the baby car seat from the front side. (Figure 10)

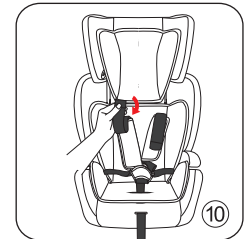


●Put the safety belts and shoulder straps back into the seat in appropriate slot. (Figure 11)

Caution: make sure both sides of the straps are at same level and not twisted.

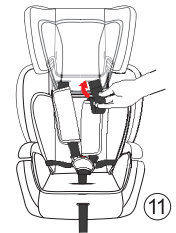


Baby safety seat

- Reset the safety-belt into the Tee buckle on the back of the backrest, and fix the polypropylene shoulder snap well. (Figure 12)

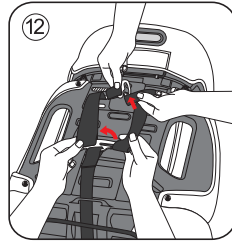


- Pull the safety belt in front side to make sure it has been properly installed.(Figure 13)

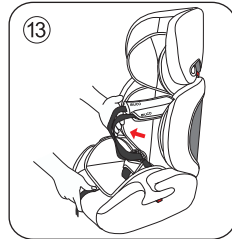


6.3 Fixation of 5-point harness


- Loose the safety belt (refer to Figure 6), then press the red button on the buckle to release it until hearing the "click" sound.(Figure 14)

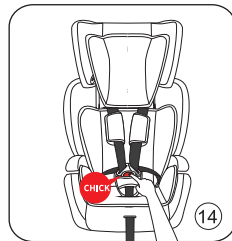

- Put the child into the baby car seat, lethis/her arms go through the safety belt.(Figure 15)

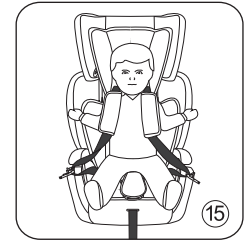


- Put the two buckle tongues together and insert into the buckle until you hear a "click" sound. (Figure 16)

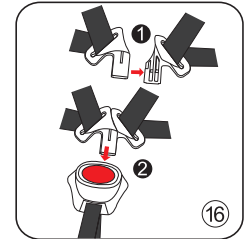

- Draw the adjusting strap forwardly to fastenthe harness system. (Figure 17)

Caution: The proper tightness is one finger space between the safety belt and the child's body. Correct position of the buckle is at the crotch of the child not his/her belly .

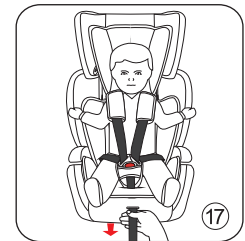


Baby safety seat

7. Baby fixation of group II III

7.1 Using diagram of group II III (Suitable to 15-36kg, age about 2-12 years)




Caution: 5-point harness system must be removed in group II III usage. (Refer to Page 20-21 Figure 25-29)

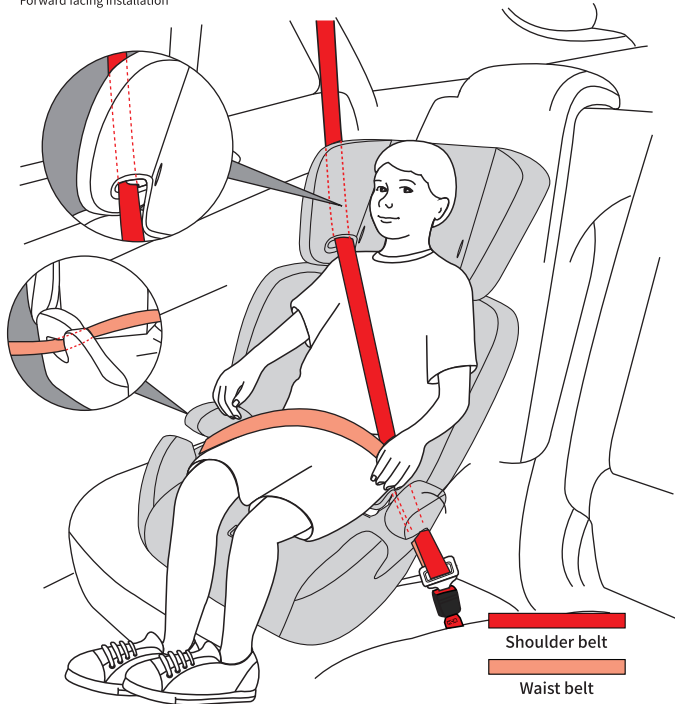


7.2 Baby fixation of group II III

● Put the baby car seat onto the front facing car seat after the 5-point harness system being removed (refer to Page 20-21 Figure 25-29). (Figure 18)

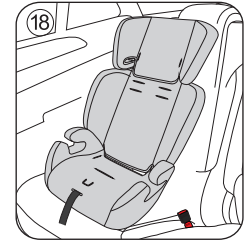


● Use the headrest adjuster to lift the headrest into an appropriate height. (Figure 19)

Caution: ① The headrest height has 6 levels. ② Before use the baby car seat, please adjust the headrest until the upper belt rout guider and the child's shoulder are at same level.

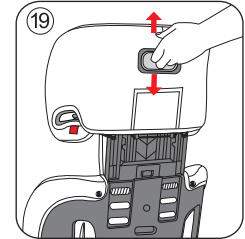

● Pull out the car belt. (Figure 20)

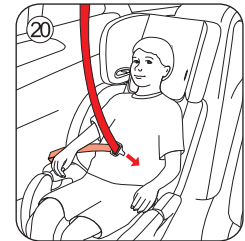

Baby safety seat

- Let the shoulder belt go through the upper belt route guider first, and the waist belt goes through the lower belt route guider. (Figure 21)





- Let both shoulder belt and waist belt cross the lower belt route guider on the other side, then buckle it on until you hear a "click" sound. (Figure 22)

Caution: The shoulder belt must go over middle of children's shoulder. And the waist belt must go over children's pelvis as low as possible.



- The car seat buckle must NOT intervene with the handle or side of the baby car seat. (Figure 23/24)

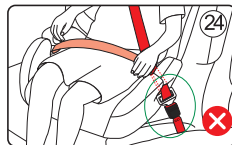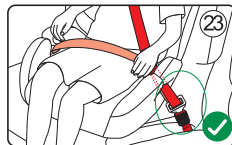


8. Baby fixation of group III

8.1 Using diagram of group III Suitable to 22-36kg, age about 6-12 years)



Caution: 5-point harness system must be removed in group III usage (Refer to Page 21-22 Figure 25/26/27/28/29). Backrest and headrest must be removed (Refer to P23 Figure 32) as well.

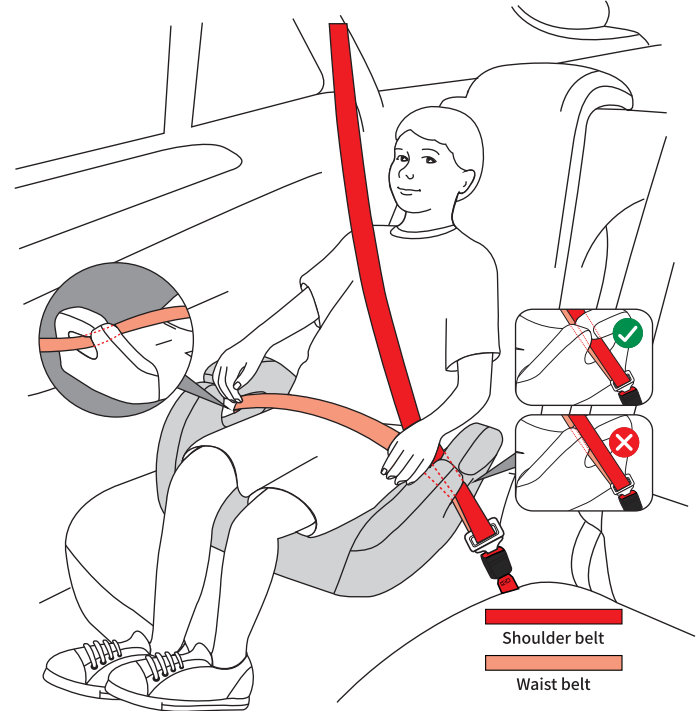

Baby safety seat



8.2 Baby fixation of group III

- Take the belt guidance out of the base and pull out the adjuster strap in the direction of arrow (as shown in picture 1) to make sure the shoulder strap between the belt guidance and baby car seat is long enough (Figure 25).

- Let both shoulder belt and waist belt go through the belt route guider on the other side, then buckle the car belt until you hear a "click" sound. (Figure 29)

Caution: The shoulder belt must go over middle of children's shoulder. And the waist belt must go over children's pelvis as low as possible.

- Fasten the belt and adjust the length of the positioning belt, clip the vehicle belt into the positioning buckle, which is the same high or a little higher than the child's shoulder. (Figure 30)

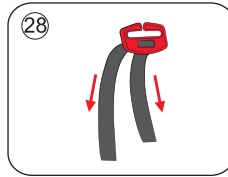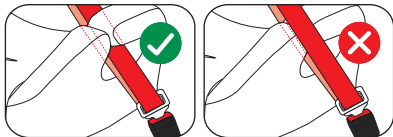

Correct way to use the belt route guider



please be notified of the change of the child's height and adjust the height of shoulder belt.

9. Maintenance of baby car seat


9.1 Cleaning of cloth cover

⚠ Do not use baby car seat without cloth cover.


- Cloth cover can be removed. Wash it with a mild detergent in warm water (water temperature does not exceed 30°C), natural dry, not dehydration.
- Plastic parts can be cleaned with soap and water, do not use strong detergents (such as solvent).
- Seat belt can apply mild soap to clean.
- Shoulder strap can be removed with mild soap water to clean.

9.2 Dismantlement of cloth cover and 5 points harness

- Press the red button on the buckle, pull out the safety belt long enough (refer to Page 12 Figure 6), open the buckle. Operating sequence ①②③ (Figure 25)

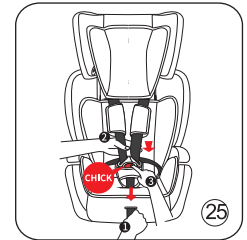


- Turn to the back of the car seat: dismantle the safety belt from the Tee buckle; release the snap buttons from the shoulder straps. (Figure 26)

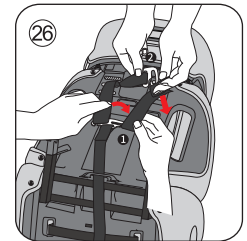


Baby safety seat


- Pull the safety belt out of the safety lock tongue hole. (Figure 27)

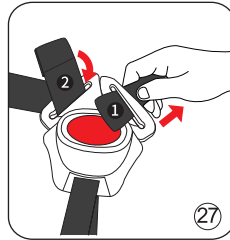


- Turn to the bottom side of car seat : ① pull the safety belt out of the safety belt hole; ② dismantle the tri-glide from the crotch strap, then 5-point harness system and the cotton pad can be removed consequently. (Figure 28)

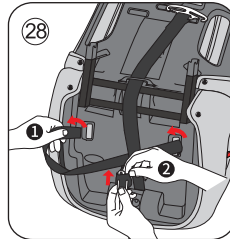


- Remove the inner headrest. (Figure 29)

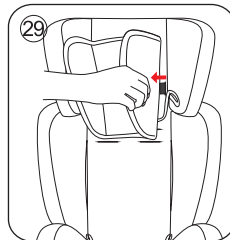


- To take off the headrest cover, simply pull open the black fixing elastic strap in order of ① ② ③ ④. (Figure 30)

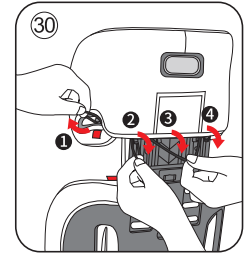

- Release all four snap-fasteners. (Figure 31)

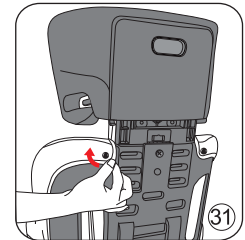

- Hold the base with one hand and push the backrest backwards with the other hand. Then the backrest fabric cover can be removed. (Figure 32)

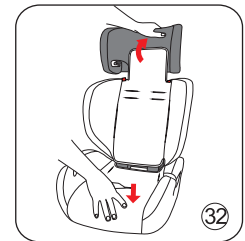


Baby safety seat

- pull up the base fabric cover to remove it, then the whole seat fabric cover is completely detached. (Figure 33)




- Buckle on all four snap-fasteners to fix the backrest cover. (Figure 36).

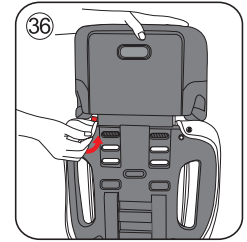


9.3 Installation of cloth cover and 5 points harness


- Put the base cover on the base, carefully press the cover into the belt route guider. (Figure 34)

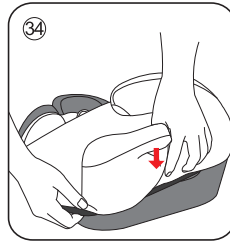


- Attach the two hooks on lower side of the backrest (with fabric cover) to corresponding slots on base. Push the backrest with one hand and spinning it with the other hand to put the backrest into position. (Figure 37)

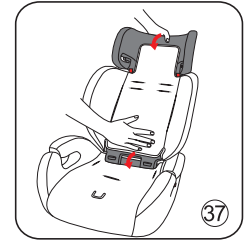

- Then adjust the rest parts to get a fine surface. (Figure 35)

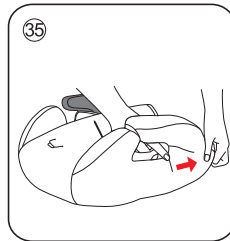


- Open the headrest cover, a black elastic strap can be seen. (Figure 38)

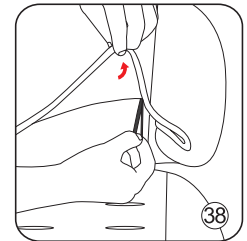


Baby safety seat

- Pull open the black elastic straps in the cloth cover following the order ① ② ③ ④ .(Figure 39)

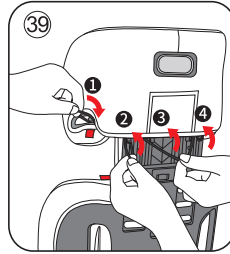


- Place cushion on the baby car seat, put buckle with crotch strap into the crotch pad, and lead the crotch strap go through the pad. (Figure 40)

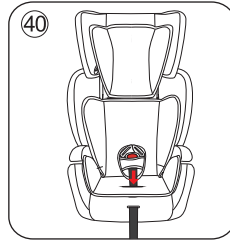


- ① Pull out the crotch strap from the bottom side and equip it with tri-glide buckle; ② Slip the seat belt through the seat belt holes in the bottom. (Figure 41)


Notes: make sure the seat belt adjustment strap is always on the top of seat belt.

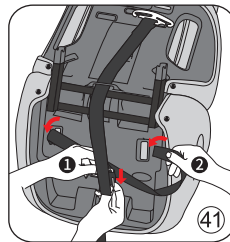

- Pull out the seat belt from the car seat's frontage. (Figure 42)


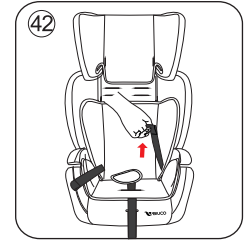


- To avoid five-point harness twisting, please put two lock tongue holes together firstly and insert into the buckle, then slip seat belts through spring bolt holes. Operation sequences as shown ① ② ③ .(Figure 43)

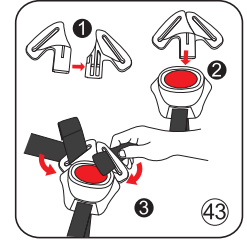


- Slip the safety belts into shoulder pads. (Figure 44)

Caution: DO NOT install the left and the right shoulder pads reversed, or there will be safety risk.

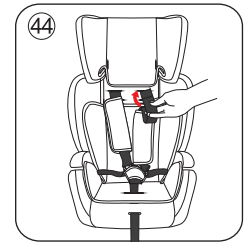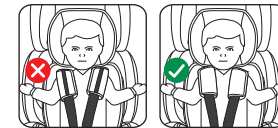


Baby safety seat

● Fix the seat belts on “T” buckle, and fasten shoulder pad polypropylene fiber mounting clamp. (Figure 45)

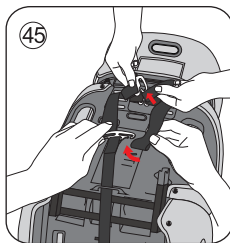

● Insert the straps of the inner headrest into corresponding holes on headrest. (Figure 46)

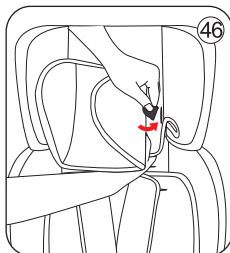

● The whole installation of baby car seat is finished. (Figure 47)



10. Warranty condition and warranty card

Warranty period is 1 year since purchased, Warranty scope includes factory manufacturing or material problems.

Warranty card is an important quality assurance certification, please keep it well in the warranty period. Meanwhile, please keep your sales vouchers and related documents.

Warranty does not cover:

- The natural phenomena in the process of using, or the damage of the car seats due to excessive pressure.
- The damage of the car seats due to inappropriate or incorrect use.
- The damage of the car seats due to car accidents.

Warranty covers:

Put the endergonic cushion on the baby car seat and pull out the crotch protector from the endergonic cushion.

Put the base cloth on the baby car seat, fix the snap-fasteners well on both sides.

1. Make the safety belt buckle through the safety belt hole of the base cloth.
2. Make the crotch protector through the crotch protector hole of the base cloth.
3. Put the safety belt adjustment belt out from the base cloth hole.